

Digital Automatic Mahjong Machine

Operation Manual



Operation Manual

1. Insert the power plug into a well-grounded socket (make sure the power switch is off before inserting the power plug)
2. Turn on the power switch, at this time the machine self-test, the operation panel indicator light in turn shining. When the reset indicator is red and accompanied by a beep sound, the self-test ends (the self-test time is between 1s-60s)
3. Press the two lifting keys at the same time, the center operating disc lifting, and pour the first set of mahjong into the shuffle circle.

Notice:

A: The number of mahjong cards poured should be consistent with the number shown in the current gear, and over-card and under-card are prohibited.

B: Except for the special mahjong cards assigned randomly, no other mahjong cards shall be used, and no other debris shall be placed in the shuffling circle.

4. Press any lift key again, the machine began to shuffle.
5. When the reset indicator is red, it indicates that the machine is finished. At this time, press the two lifting keys again at the same time, the operation disk rises, and put the second set of the same number of mahjong cards.

6. Press any lift key again, the machine starts to work. The mahjong cards put in for the first time are raised to the table, and the mahjong cards put in for the second time are shuffled in the machine.

7. At this time you can start the game, press the dice button, the dice will randomly beat, let go of the dice key, the dice will naturally stop.

8. After the completion of a round of games, press the two lifting keys again at the same time, the operation disk rises, and push all the cards in the first deck of the table into the shuffle circle.

9. Press any lift key again, the machine starts a new round of work. The last mahjong card is raised to the table, and the second mahjong card is shuffled in the machine.

10. In the same gear state entertainment, please follow steps 10-13 cycle operation. When you need to switch to a different gear state for entertainment, please first raise the mahjong card in the machine to the desktop, keep no mahjong card left in the machine, then turn off the power switch, adjust the gear button to the required new game gear, because the machine has automatic memory function, please wait 30 seconds and turn on the power switch again, at this time the machine has changed to the required new gear.

11. The remaining the dealer indication: when the machine starts the dealer, the dealer indicator lamp starts to show the number of dealer, which can be displayed up to nine times, the green light represents 1, the red light represents 5, and the sum represents the current number.

12. After the end of the game, please completely clean the mahjong cards in the machine in the special mahjong box.