




Air Jacking beam manual

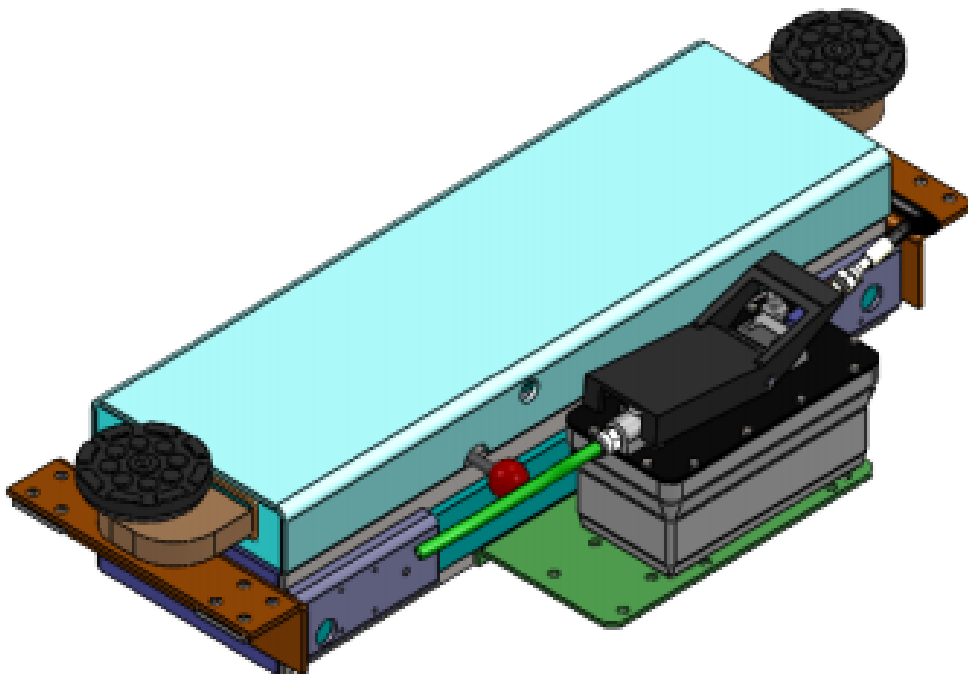

Content

1. Outer dimension.....	1
2. Installation.....	2
3. Safety operation.....	3
4. Exploded drawing.....	4

1. Outer dimension:

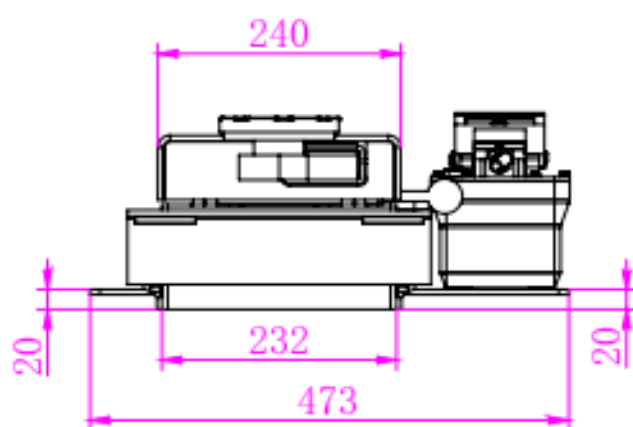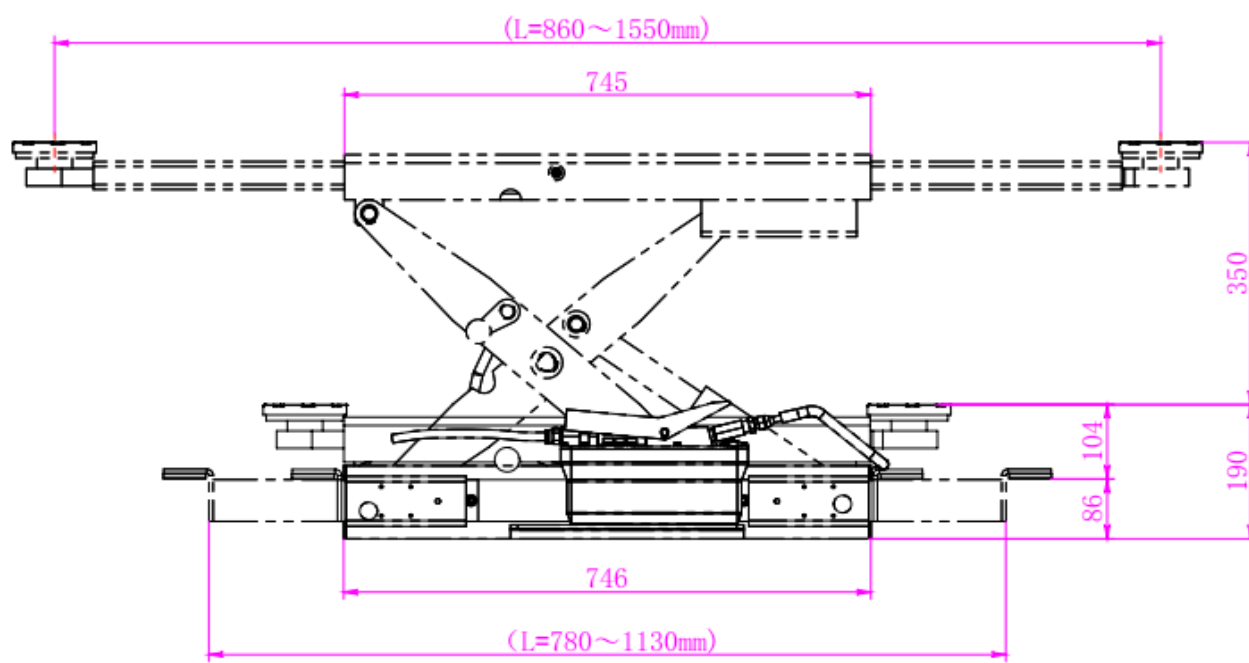

4) When lifting the front wheel, use the tire wedge to lock the rear wheel. Similarly, lift when the rear wheel is used, the front wheel is locked with a wedge to prevent the vehicle from moving when it rises.

5) Tighten the control valve bolt clockwise, push the handle up and down till the top lock position. (position 1, locked)


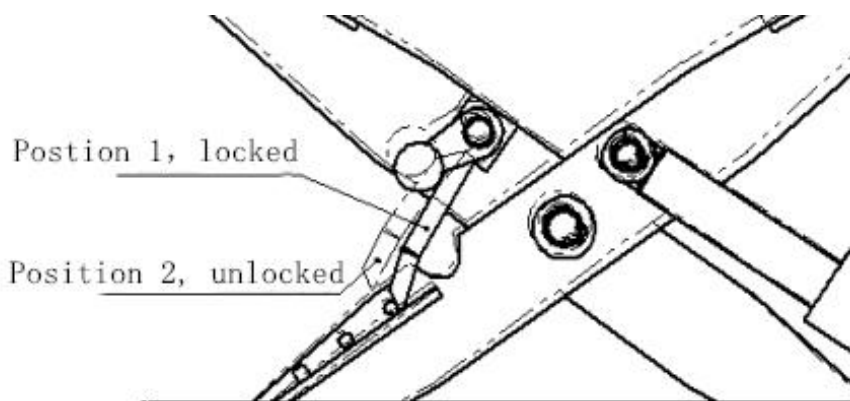



Fig 2

6) Decrease: press the handle to rise 5~10mm, move the safety handle to unlock, then slowly release the control valve bolts.(position 2, unlocked)

4. Exploded drawing

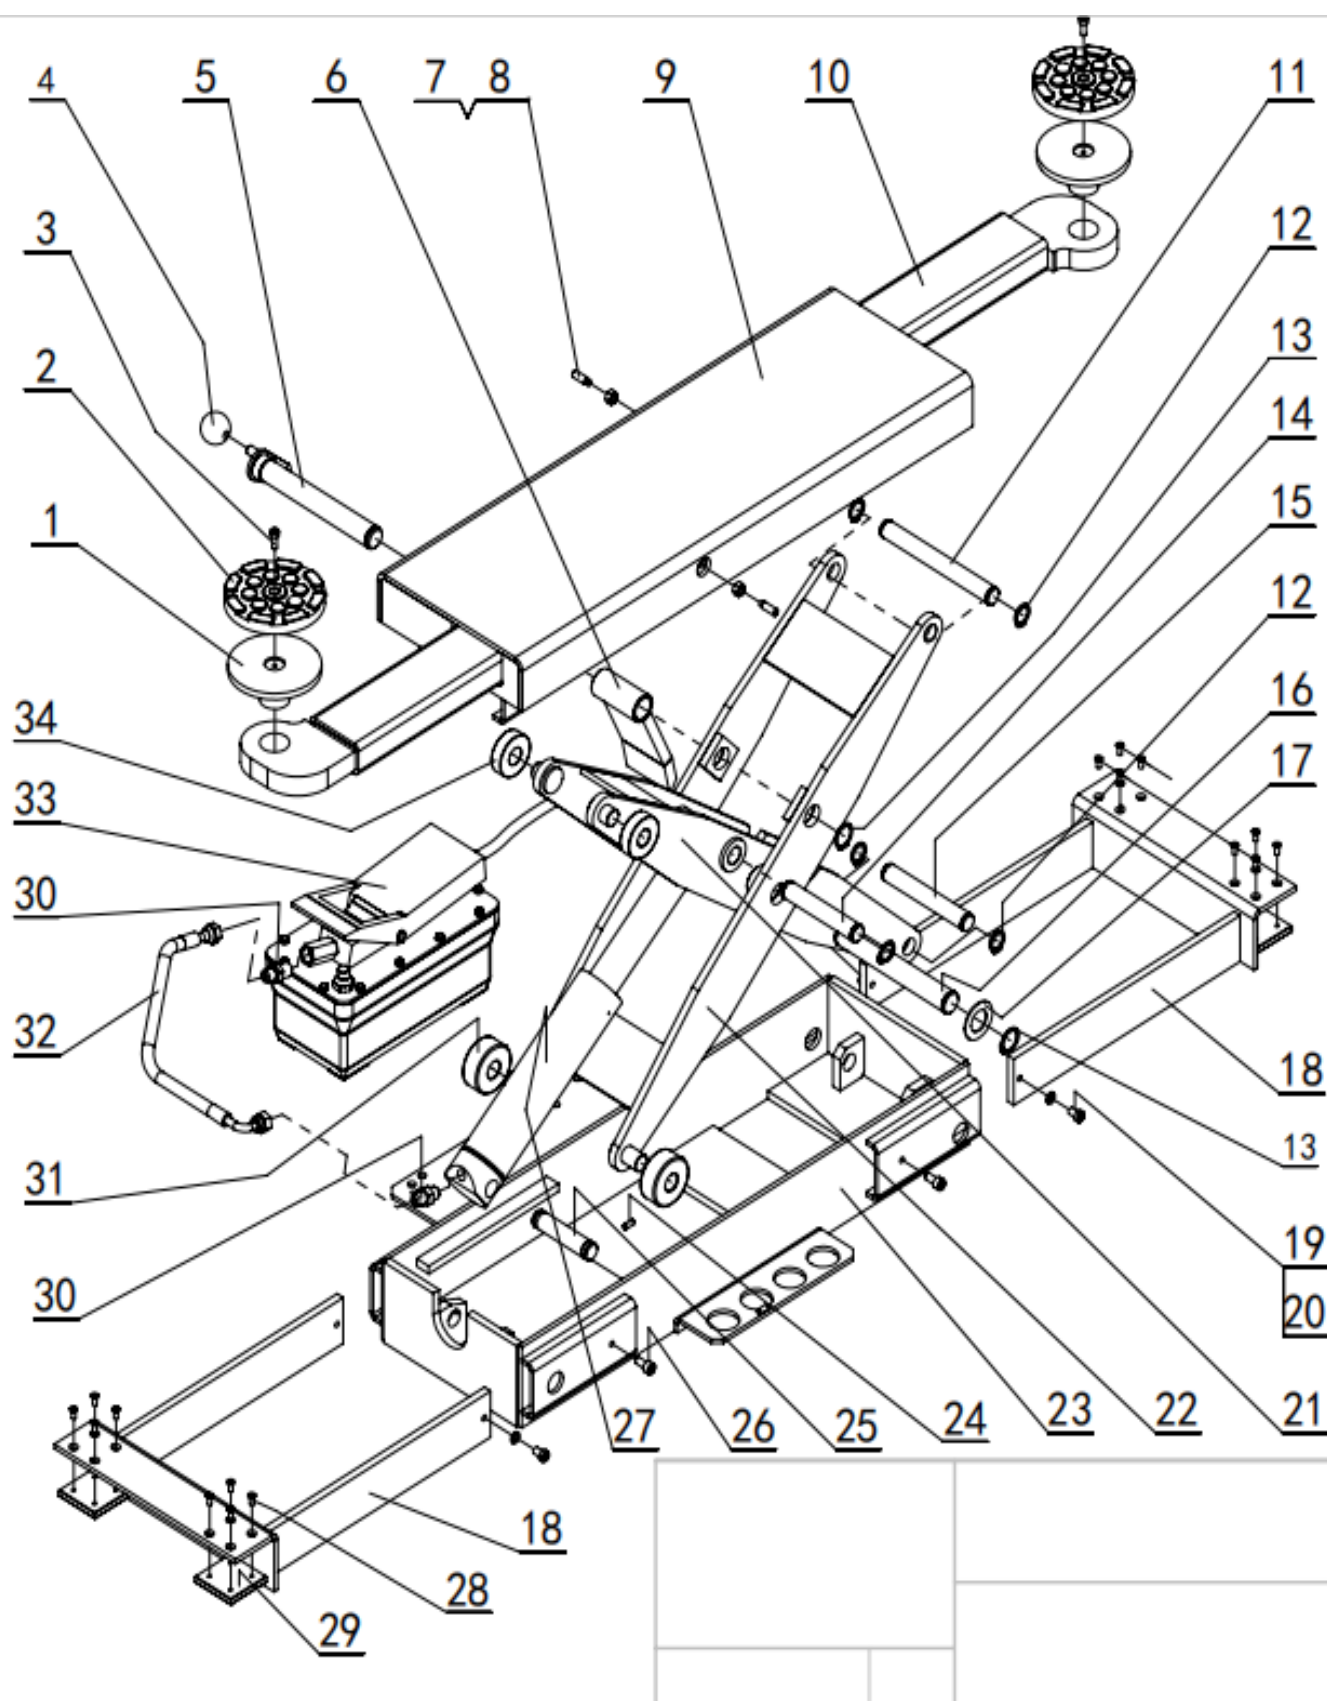

NO.	Code	Part Name	Qty	Remark
1	M6×12 GB/T70.1	M6*12bolt	2	
2	QJY3.8-G1-05-13	rubber pad	2	
3	QJY3.0-D6-05-3-0	pad weldment	2	
4	QJY3.0-D1-3-14	plasti ball	1	
5	4QJY3.5-B-09-3-8-0a	axle	1	Φ25
6	4QJY3.5-B-09-3-7-0a	safety latch	1	
7	M8×15 GB/T79-1985	M8*15 bolt	2	
8	M8 GB/T41	M8 nut	2	
9	4QJY3.5-B-09-8-1-0a	platform	1	
10	4QJY3.5-B-09-5-1-0a	arm	2	
11	4QJY3.5-B-09-3-6	axle	1	Φ20
12	d20 GB/T894.1	d20 ring	6	
13	d25 GB/T894.1	d25 ring	3	
14	4Q. JY3.5-B-09-9	axle	1	Φ20
15	4QJY3.5-B-09-2-2	axle	1	Φ20
16	4QJY3.5-B-09-3-3	middle axle	1	Φ25
17	QJY3.5-G4-10-05	washer	2	
18	4QJY3.5-B-09-6-00A	supporting frame	2	
19	M8×12 GB/T70.1	M8*12 bolt	4	
20	d8 GB/T93	d8 spring washer	4	
21	4QJY3.5-B-09-2-0	inner scissor arm	1	
22	4QJY3.5-B-09-3-0	outer scissor arm	1	
23	4QJY3.5-B-09-1-00	bottom frame	1	
24	M6×15 GB/T79-1985	M6*15 bolt	2	
25	4QJY3.5-B-09-8	cylinder axle	1	
26	M8×16 GB/T70.1	M8*12 bolt	4	
27	4QJY3.5-B-09-7-0a	50 cylinder	1	
28	M5×10 GB/T819	M5*10 bolt	16	
29	4QJY3.5-T-09A-14-2	nylon slider	4	
30	4QJY3.5-B-09-22a	fitting	2	
31	4QJY3.5-B-09-3-2	buttom pulley	2	
32	4QJY3.5-B-21a	hydraulic hose	1	L=450
33		air pump	1	
34	4QJY3.5-B-09-2-3	upper pulley	2	

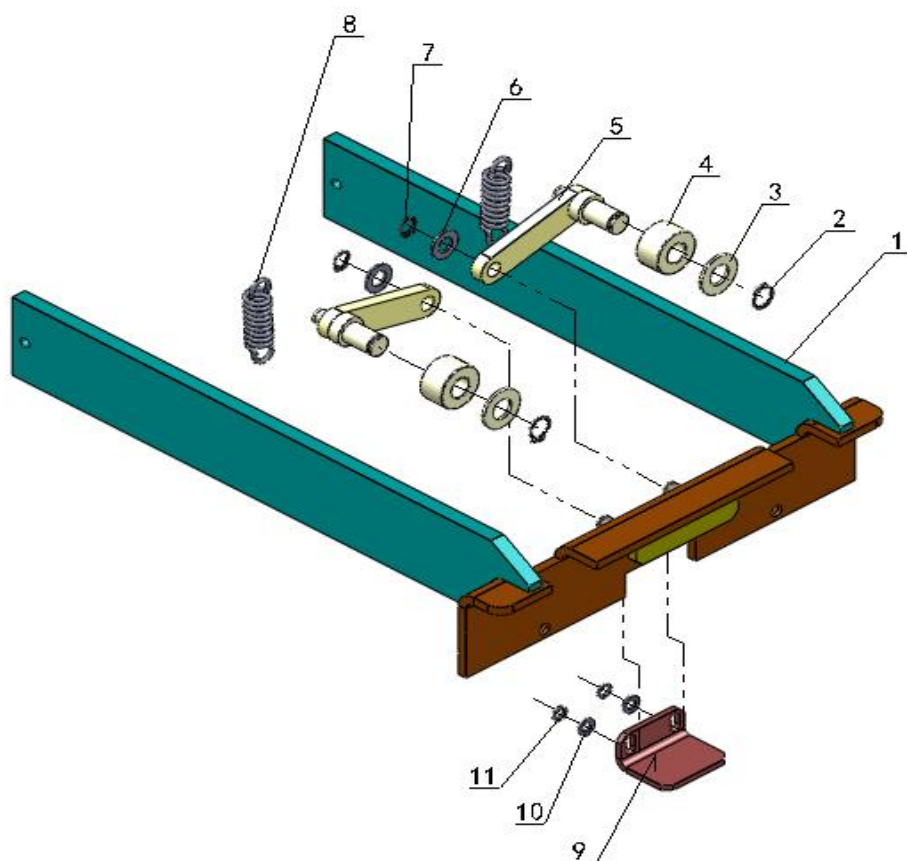

11	d6 GB93	spring washer	1	Φ 25
10	D6 GB95	flat washer	1	
9	4QJY3.5-B-09-6-6	limit plate	2	
8	4QJY3.5-B-09-6-5	spring	2	
7	D10 GB/T891.1	d10 ring	1	
6	D8 GB95	d8 washer	2	
5	4QJY3.5-B-09-6-2-0	pulley frame	1	Φ 20
4	4QJY3.5-B-09-6-3	pulley	6	
3	4QJY3.5-B-09-6-4	d14 ring	3	
2	D14 GB/T891.1	d14 ring	1	Φ 20
1	4QJY3.5-B-09-6-1-0A	supporting frame assembly	1	Φ 20
NO.	Code	Part Name	Qty	Remark