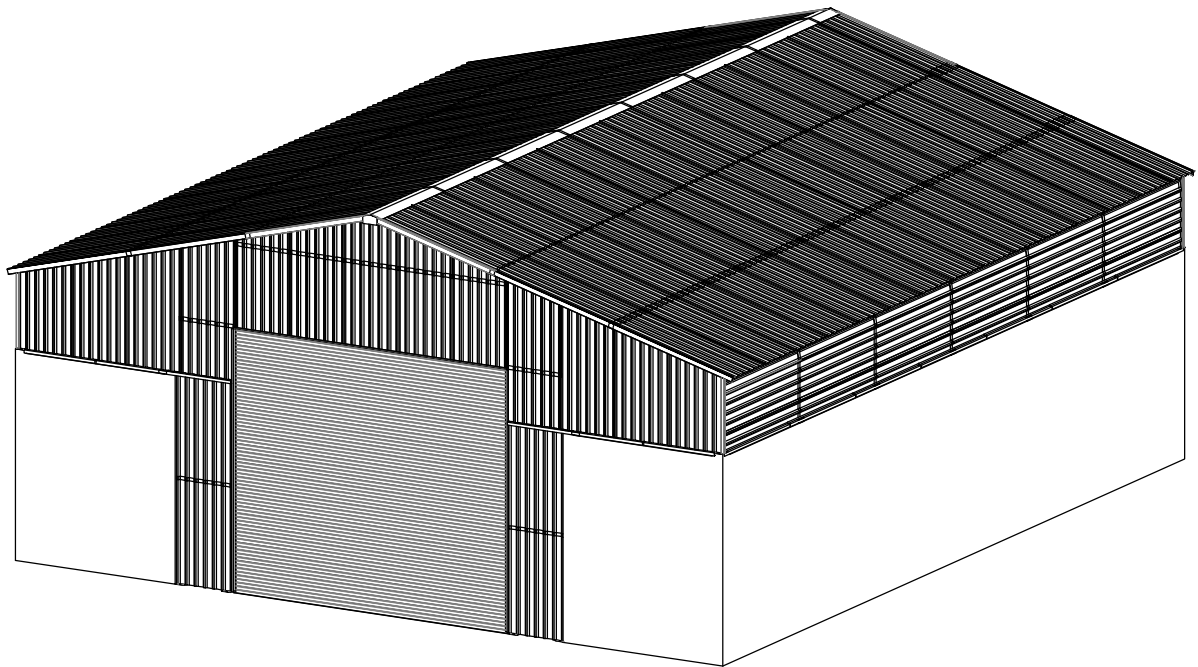


STEEL STRUCTURE CARPORT

KIT FOR ENCLOSING CONTAINER KIT

MODEL:SGC3640-H260



- Please read and understand the product manual completely before assembly.
- Check against the parts list to make sure all parts are received.
- Wear proper safety goggles or other protective gears while in assembly.
- Do not return the product to dealer. They are not equipped to handle your requests.

Important tips

Dear user:

Hello!

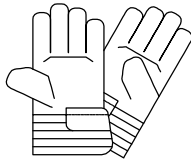


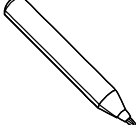
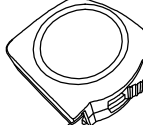
In order to offer you a better use experience, we recommend that after the installation of the product, you shall carry out anti-rust protection treatment for the cutting end directly exposed to the air, the paint scratch and the surface zinc layer damage caused during the installation process. Due to the limitation of shipping conditions, we cannot provide you with flammable and explosive products such as antirust paint or antirust oil. Please purchase them locally or contact the dealer. After antirust treatment, the service life of the product can be effectively extended.

Manufacturer
January 2023



BEFORE YOU START

Items Required:

Tools					
	gloves	Safety Glasses	Shoes	Riveting Gun	Sleeve
Tools					
	Power drill	Screw drive	Pencil	Tape Measure	Ladder

⌚ Clear a working area to allow access on 4 sides. A raised work surface will make assembly easier.

⌚ Please choose a dry and calm day to start assembly. Do not attempt installation in rainy or windy day.

⌚ Keep roof clear of leaves and snow with long handled, soft-bristled broom. Heavy amounts to

snow on roof can damage building, making it unsafe to enter.

⌚ All parts are identified so when working through the instructions page by page the diagrams show where each part is positioned.

⌚ Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands,

safety glasses to protect your eyes and shoes or boots to protect your feet.

⌚ Please keep children away from your construction site.

⌚ Most assembly can be completed by one person, assistance may be needed when you reach the erection stage.












⌚ Cleaning should be performed as often as is required to remove any dirt, salt, and pollutants.

⌚ Please note: Some local government authorities have rules & regulations on shed installation and you may need approval to erect this shed.




STEPS:

1. When completed place shed in position and anchor securely to the ground.
2. Clean up all metal pieces, rivets and screws.


PART LIST

Part No.	Picture	Qty	Part No.	Picture	Qty
PA7		2	B3		6
PA8		2	B4		4
PA9		5	B5		2
PB1		1	B6		2
PB2		1	B7		1
PB3		2	B8		1
PB4		4	B9		1
PB5		1	B10		2
PB6		1	B11		2
PB7		5	B12		3
PB8		9	B13		8
PB9		3	FU1		2
Z1		8	FU2		4
B2		8			


PART LIST

Part No.	Picture	Qty	Part No.	Picture	Qty
S12		356	C52		12
CG2		8	C14		8
C22		16	S23 (White)		256
S23 (BLACK)		18	S11		32

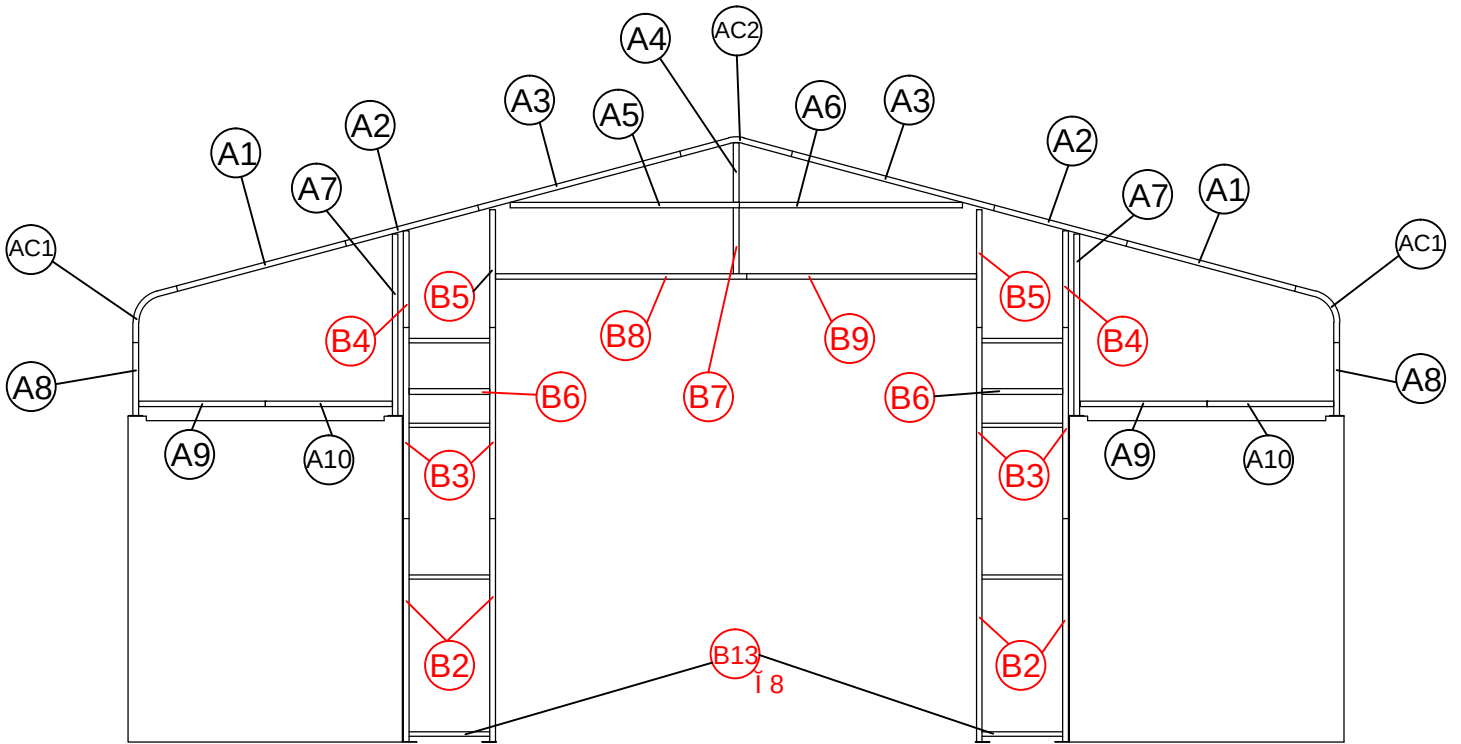
Front




Back

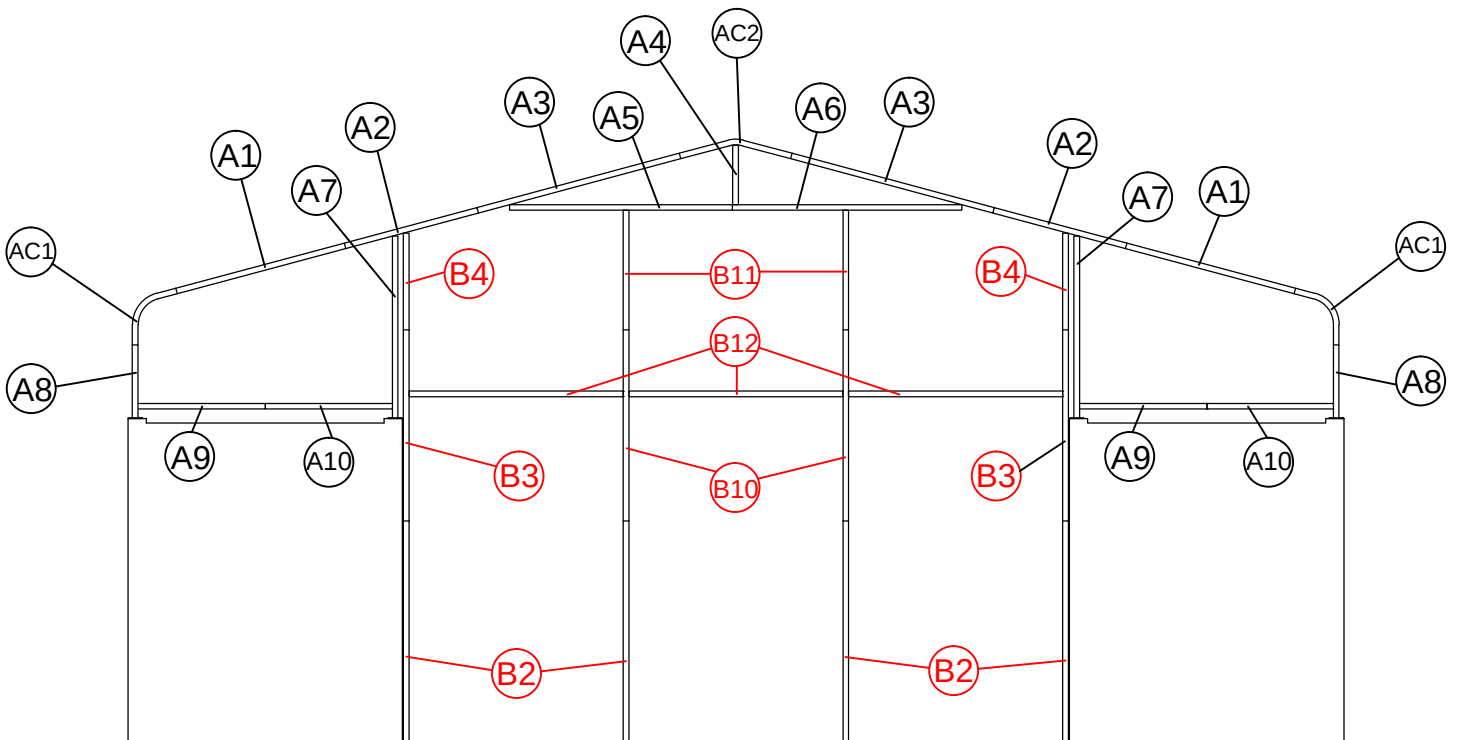

Front

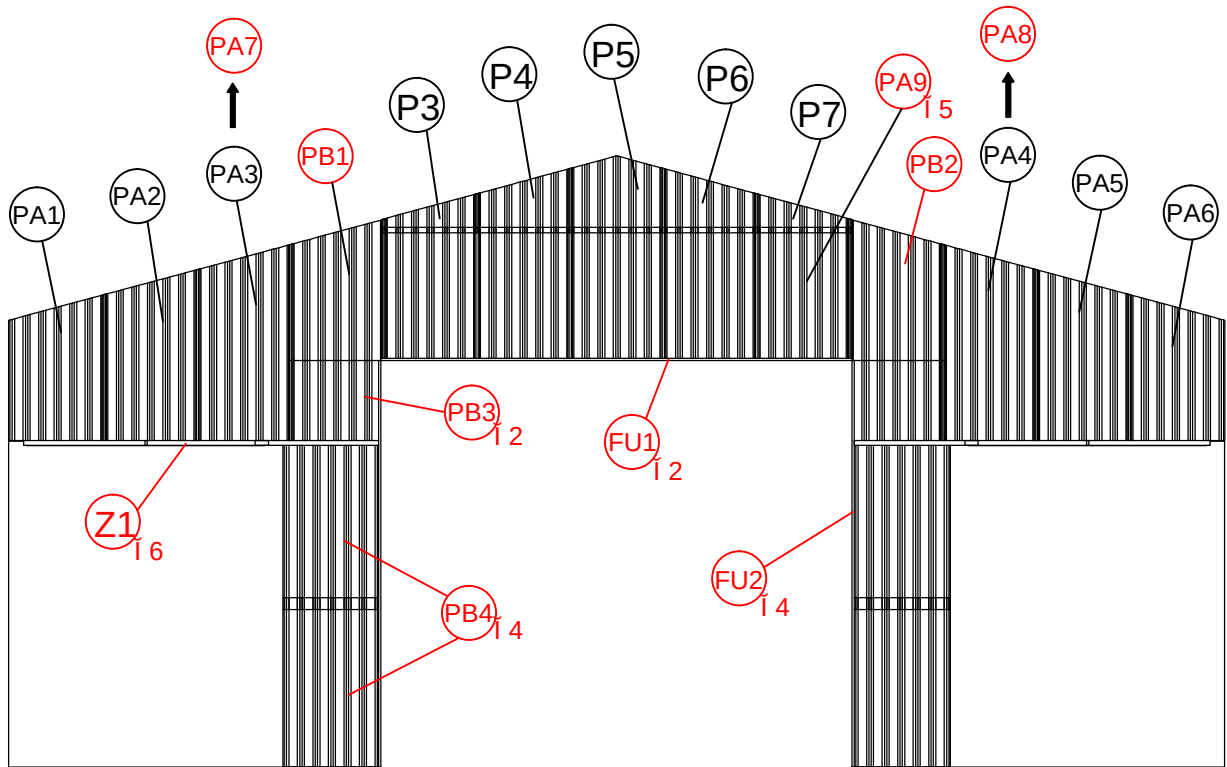


Back

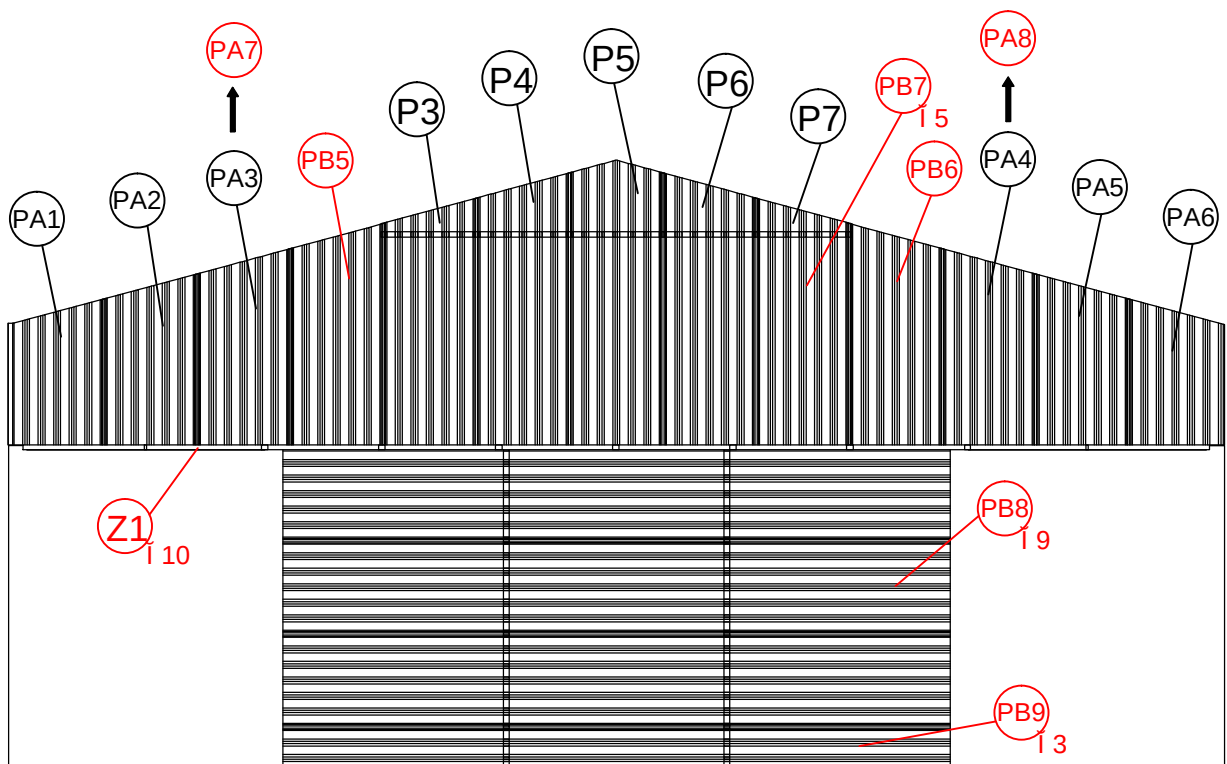


INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	B2	2		B3	2		B4	2		CG2	2
	C52	4		S12	56		S11	8			

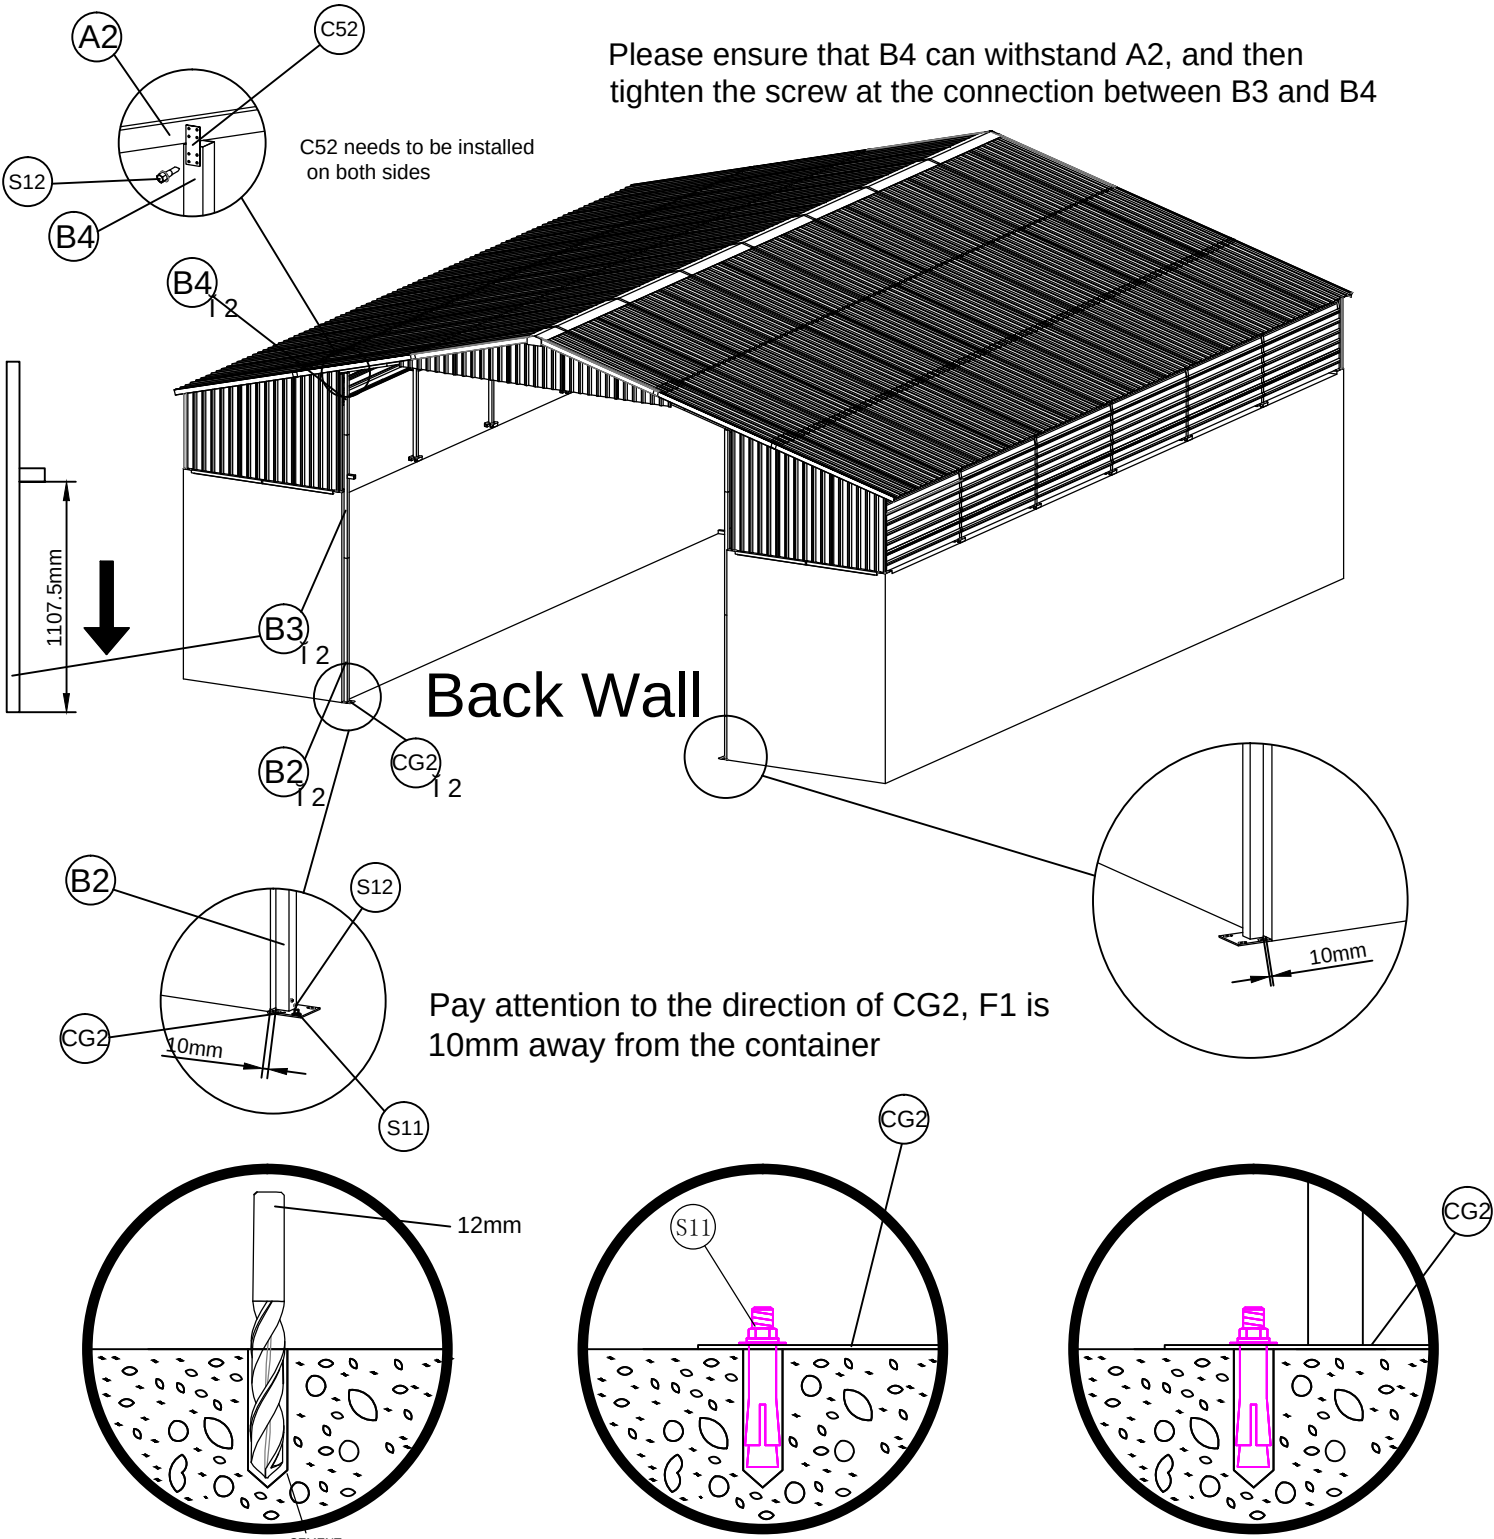

INSTALLATION OF FRAMEWORK


PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	B2	2		B10	2		B11	2		B12	3
	C14	4		CG2	2		S12	72		S11	8

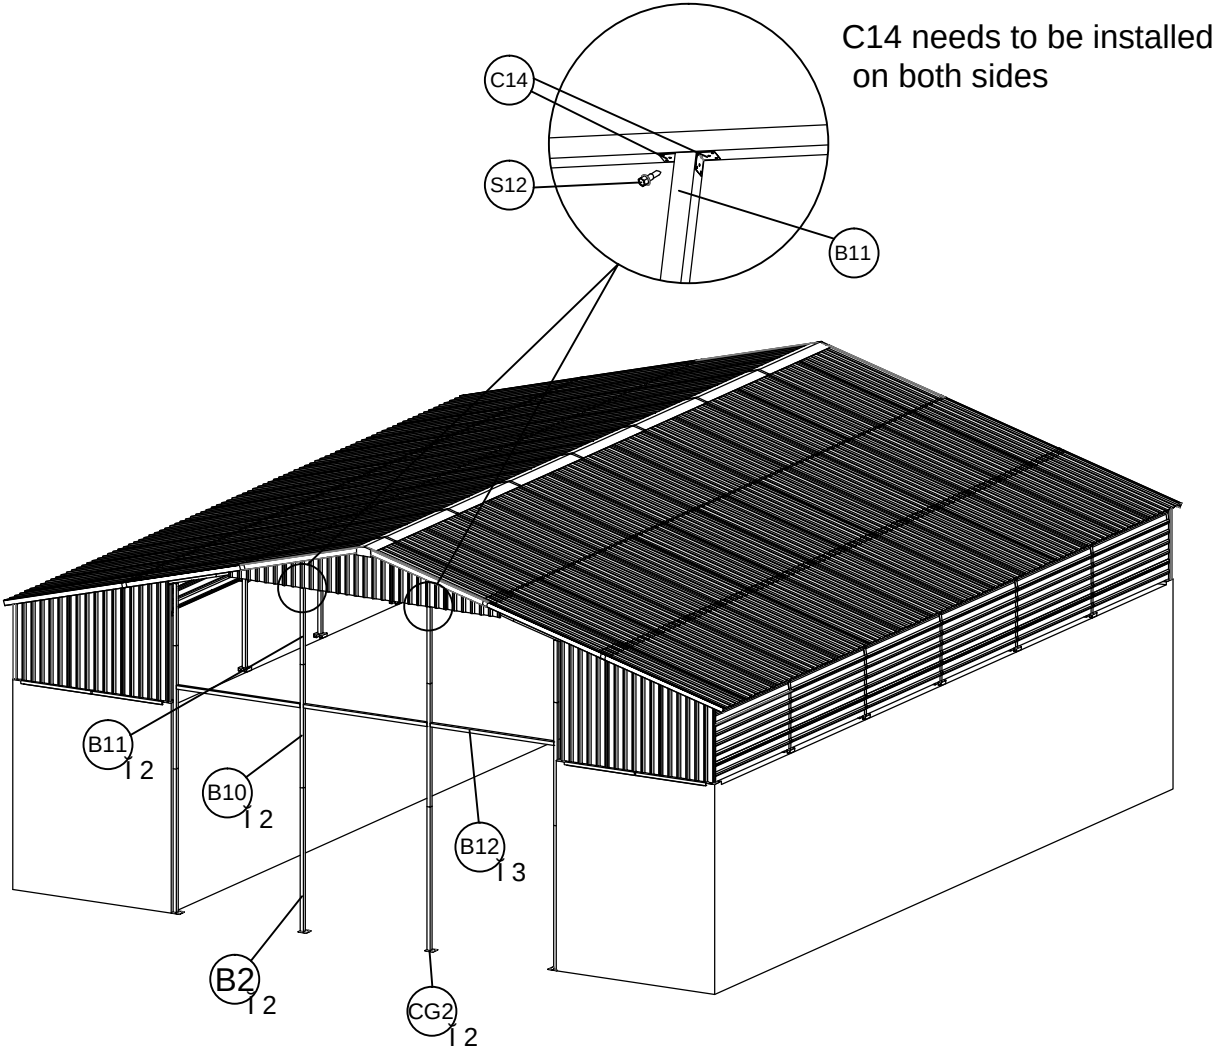

INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	B2	2		B3	2		B4	2		CG2	2
	C52	4		S12	56		S11	8			

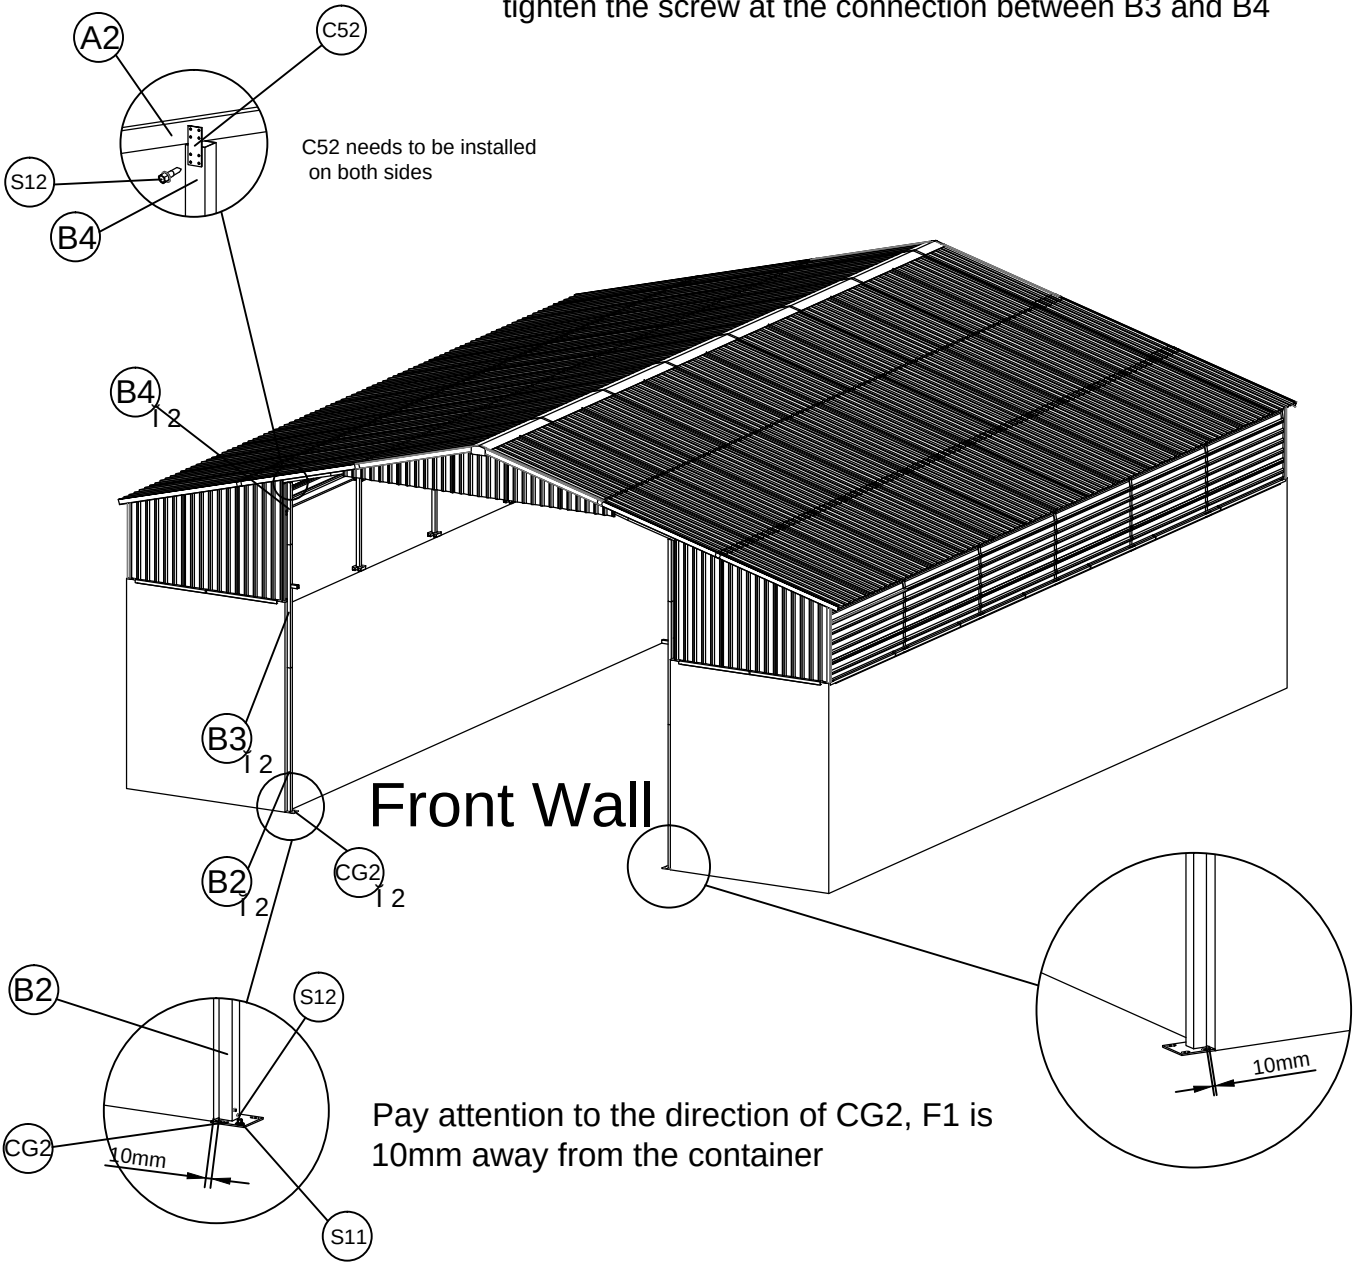
Please ensure that B4 can withstand A2, and then tighten the screw at the connection between B3 and B4



INSTALLATION OF FRAMEWORK


PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	B2	2		B3	2		B5	2		B6	2
	CG2	2		C52	4		S12	72		S11	8

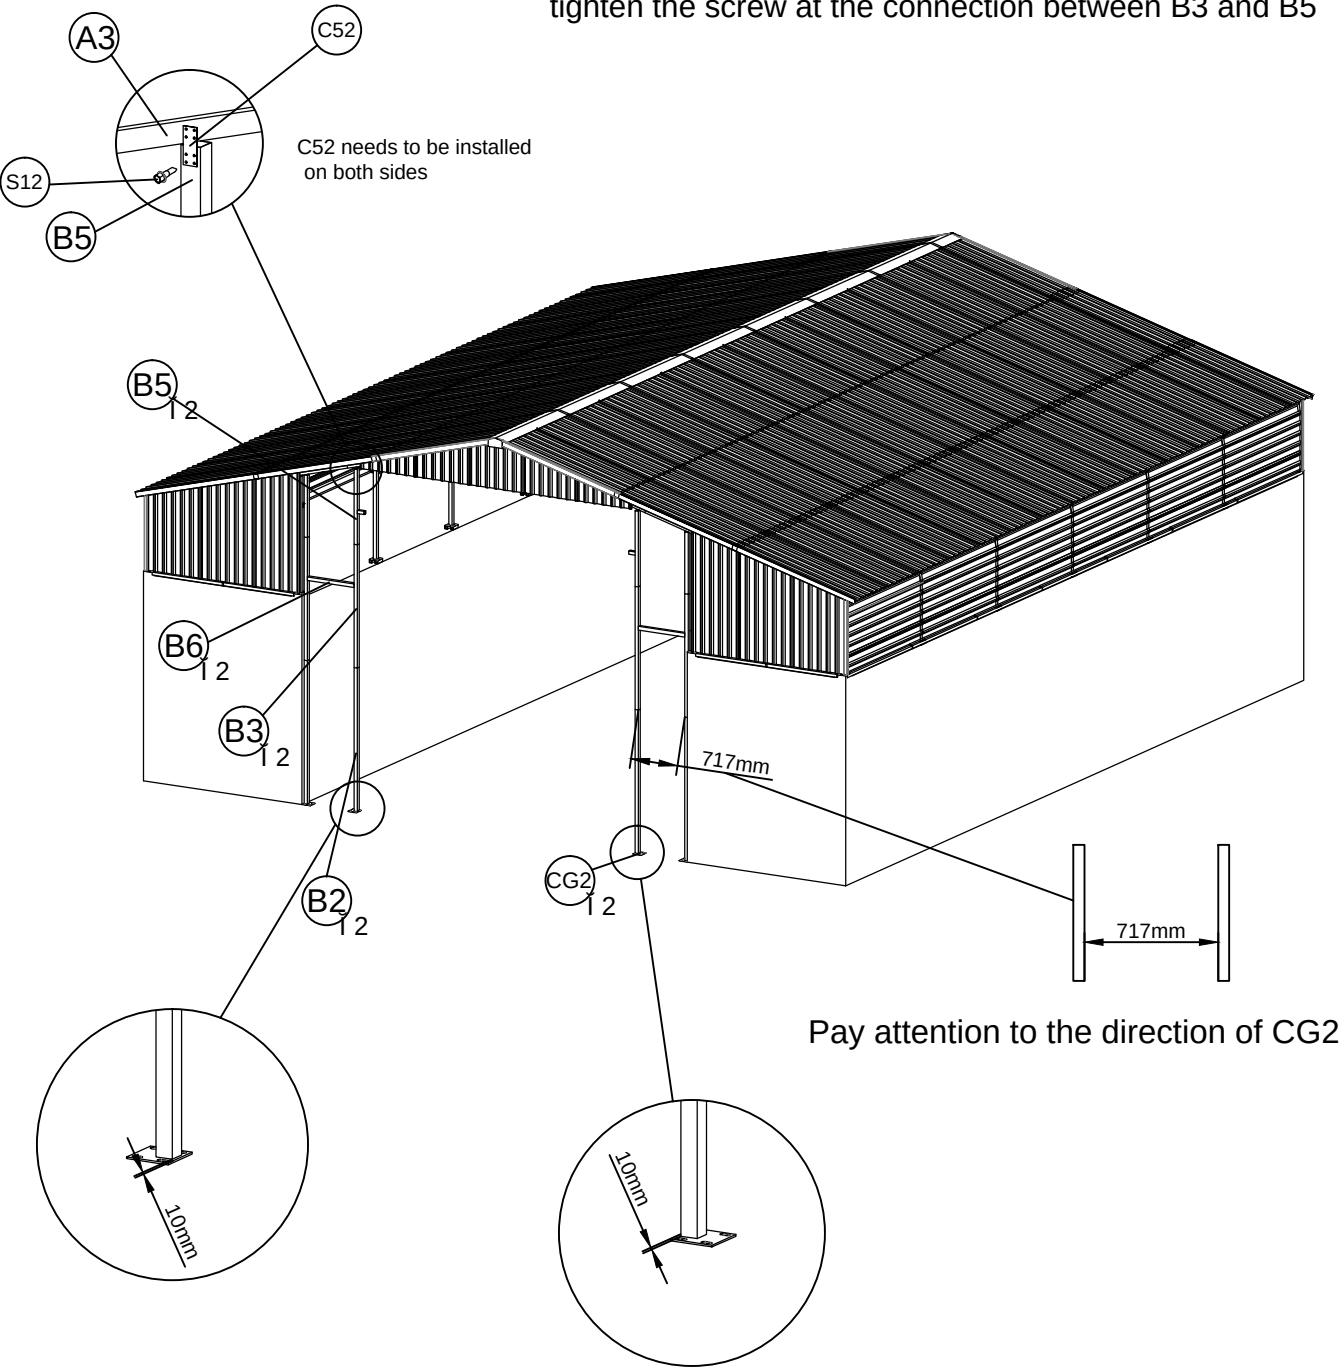Please ensure that B5 can withstand A3, and then tighten the screw at the connection between B3 and B5




INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	B13	8		C22	16		S12	64

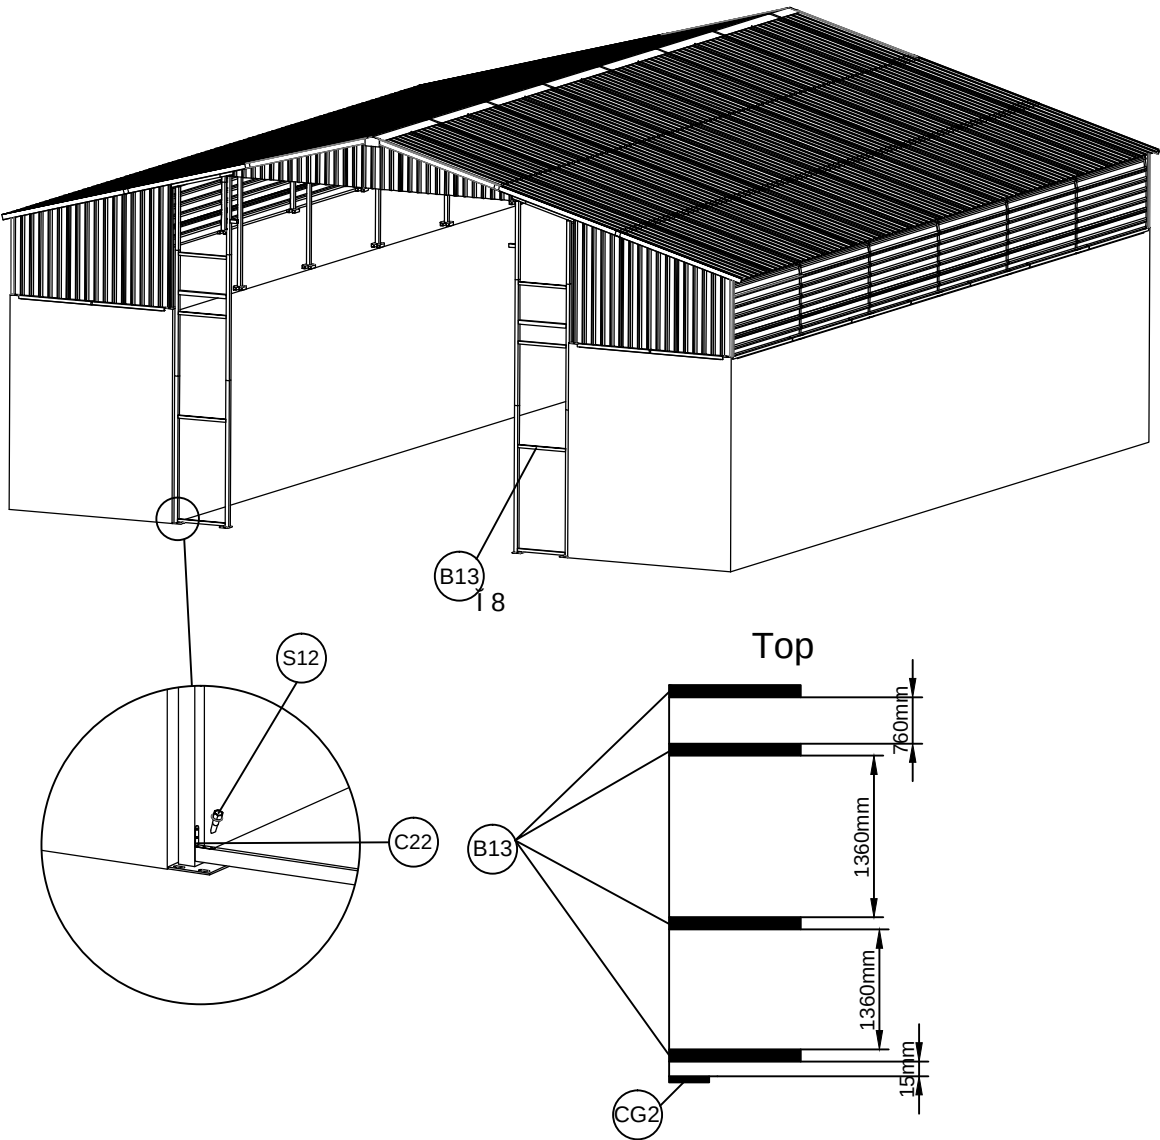


INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	B7	1		B8	1		B9	1
	C14	4		S12	36			

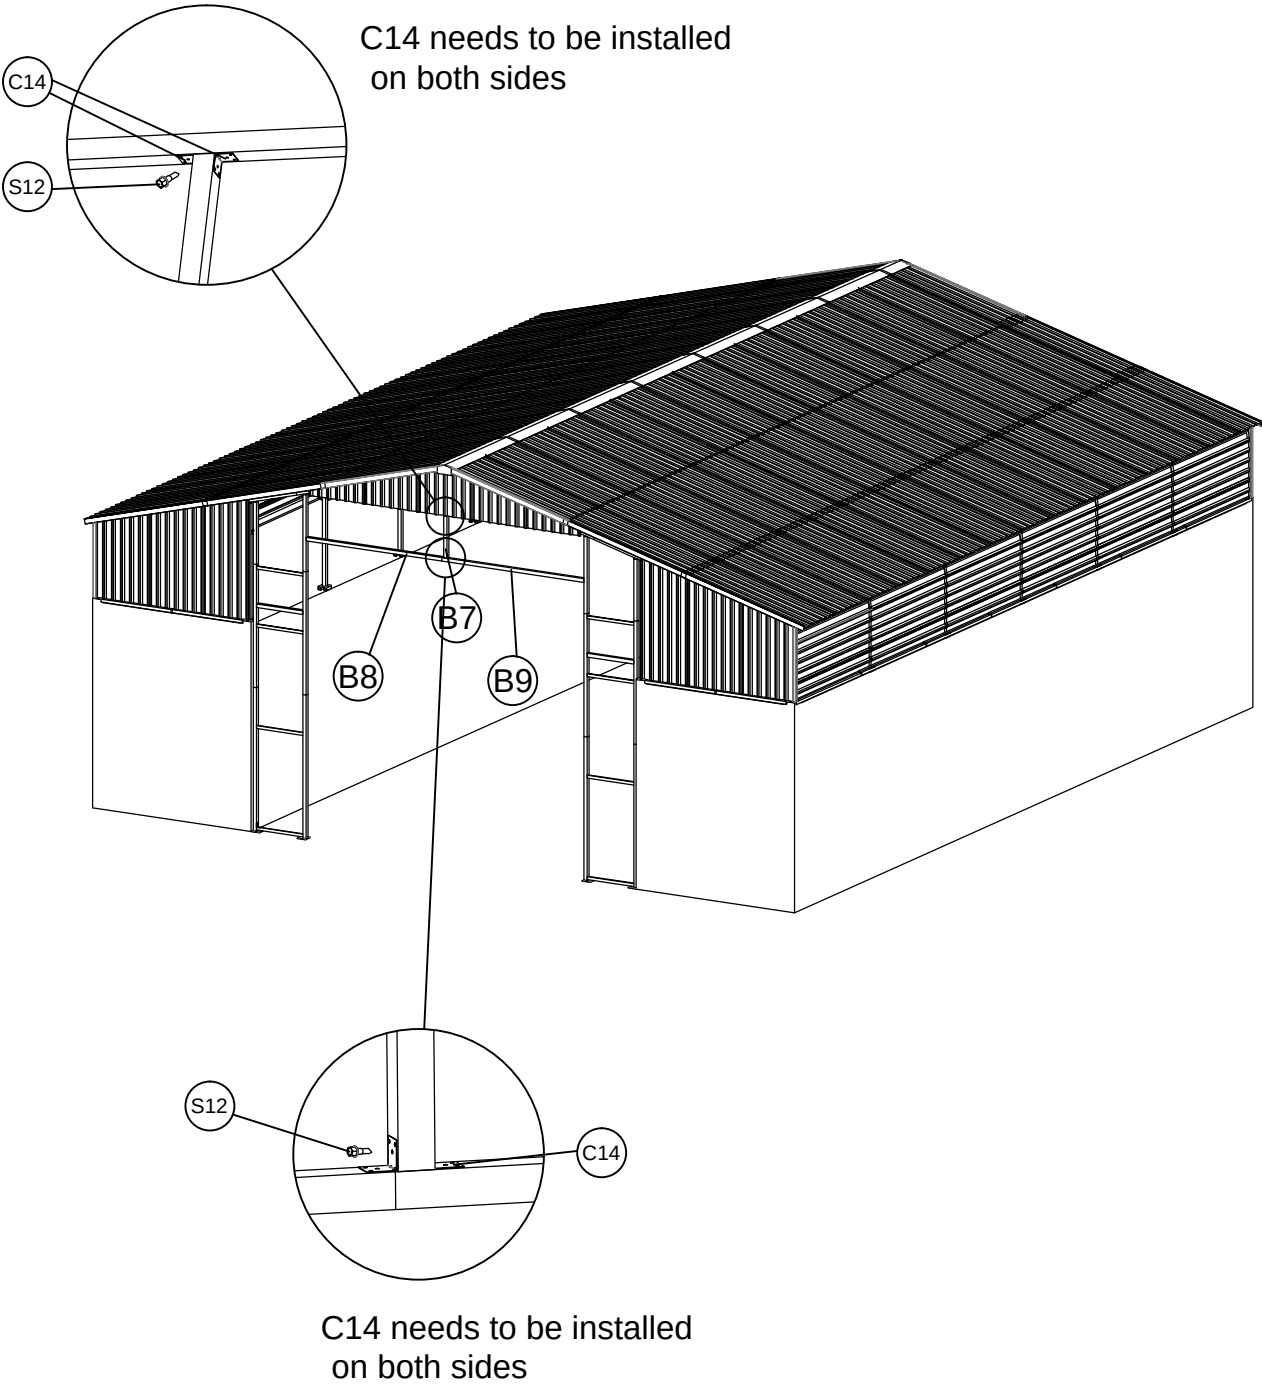

INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PA7	1		PA8	1		S23 (White)	16

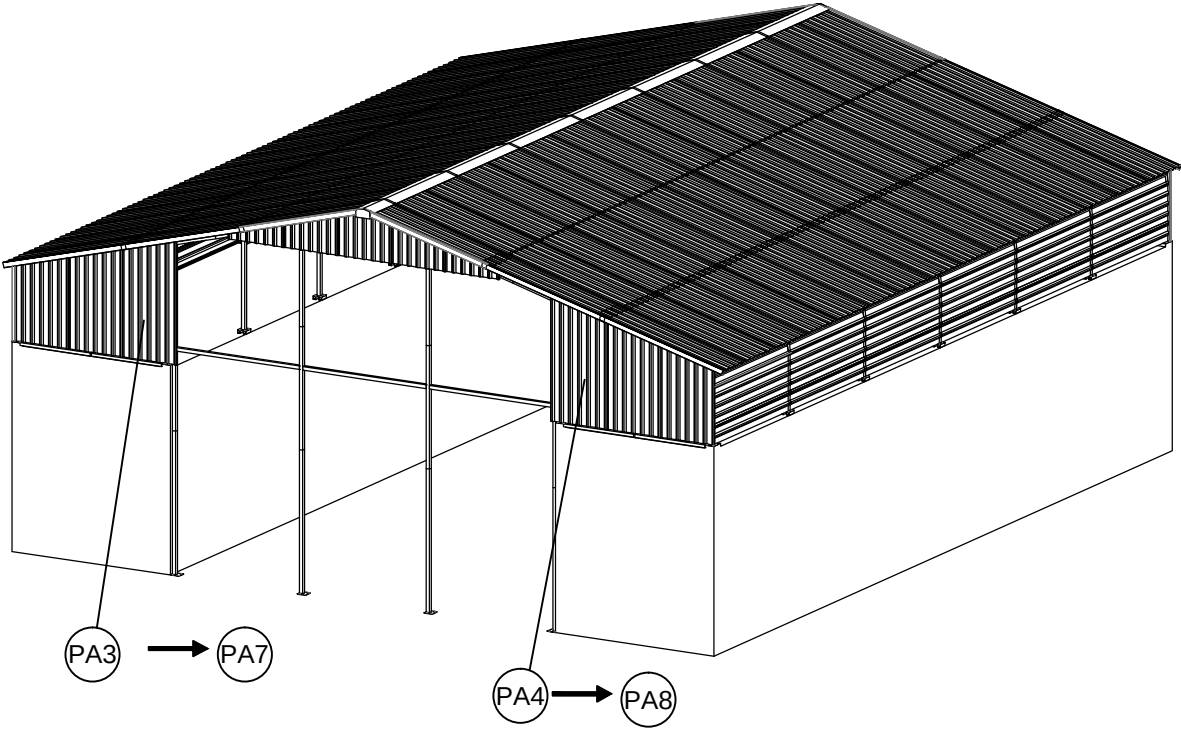


If the product has already been installed, remove the original PA3 and PA4 and replace them with PA7 and PA8. If the installation is not yet complete, use PA7 and PA8 directly for installation

INSTALLATION OF FRAMEWORK


PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PB8	9		PB9	3		Z1	6		S23 (White)	68

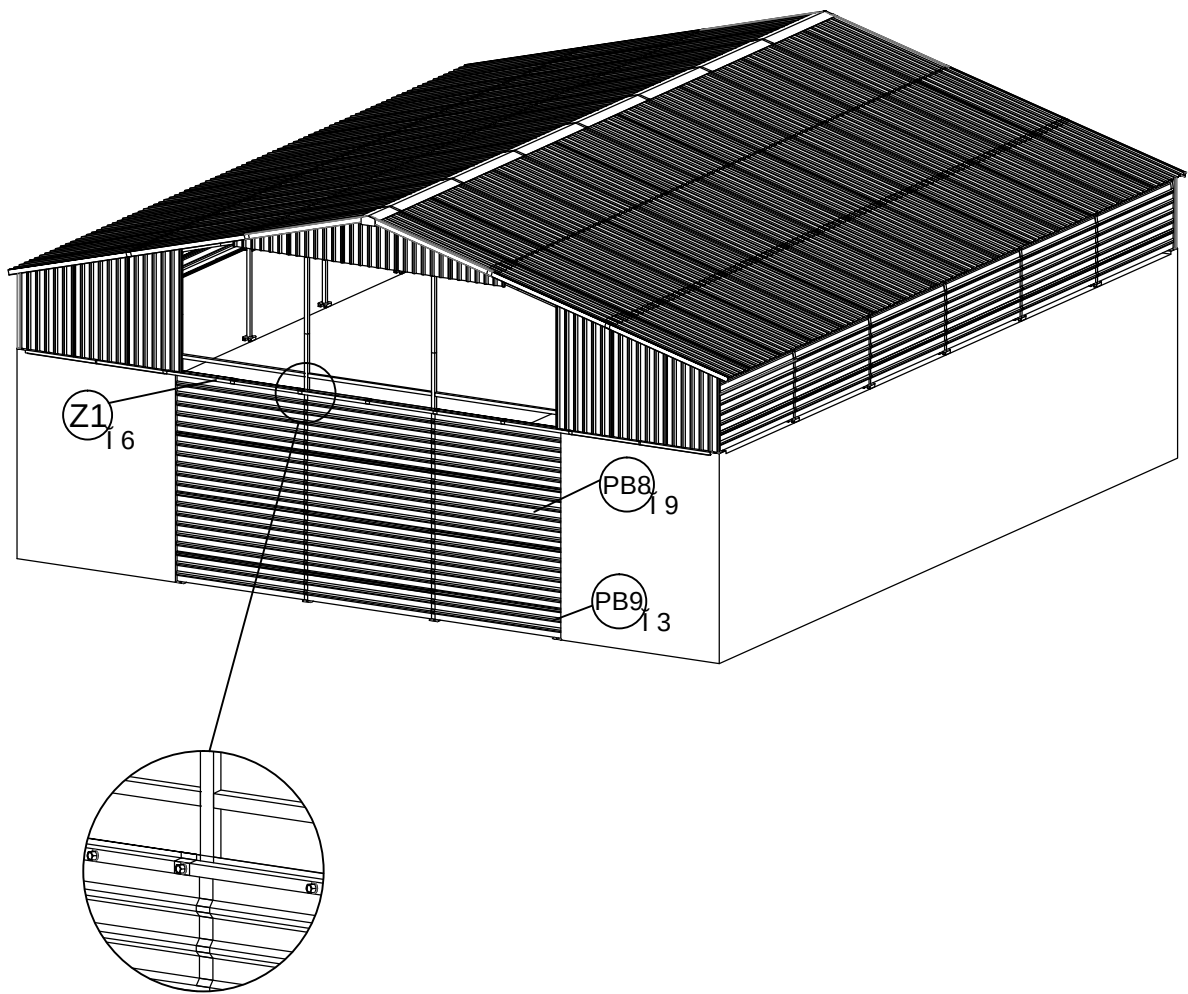S23 is divided into two colors, black and white. Which one to use depends on the color of your parts. Black is paired with black, and white is paired with white




INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PB5	1		PB6	1		PB7	5		S23 (White)	56

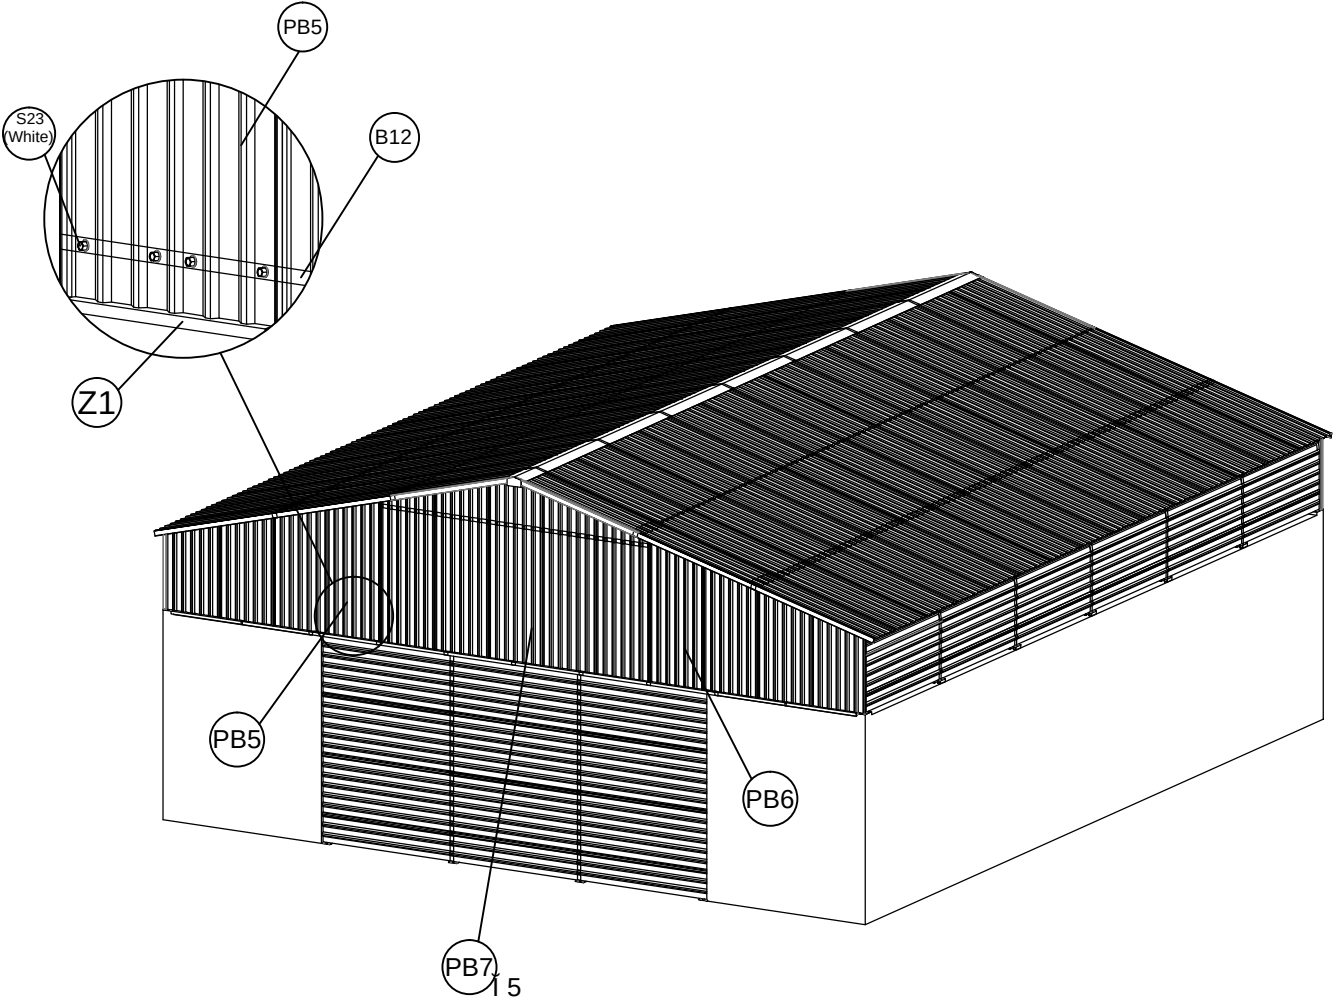

INSTALLATION OF FRAMEWORK


PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PA7	1		PA8	1		S23 (White)	16

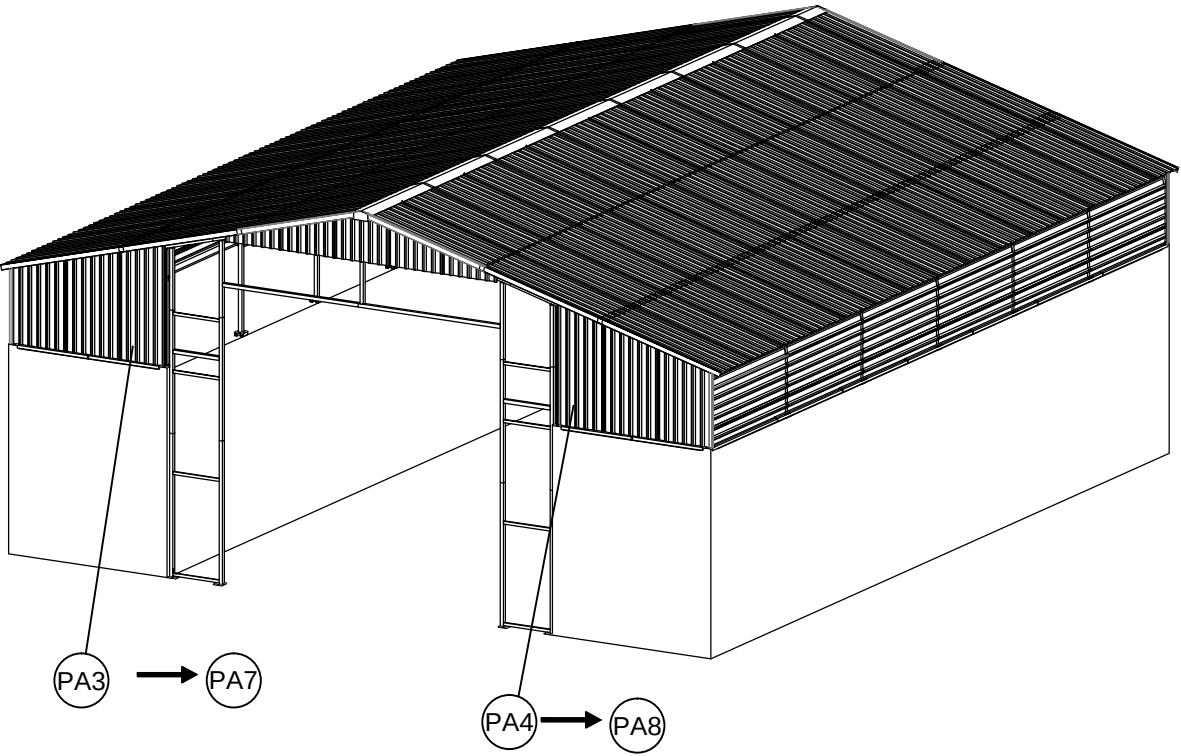

If the product has already been installed, remove the original PA3 and PA4 and replace them with PA7 and PA8. If the installation is not yet complete, use PA7 and PA8 directly for installation


INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PA9	5		PB1	1		PB2	1		S23 (White)	56

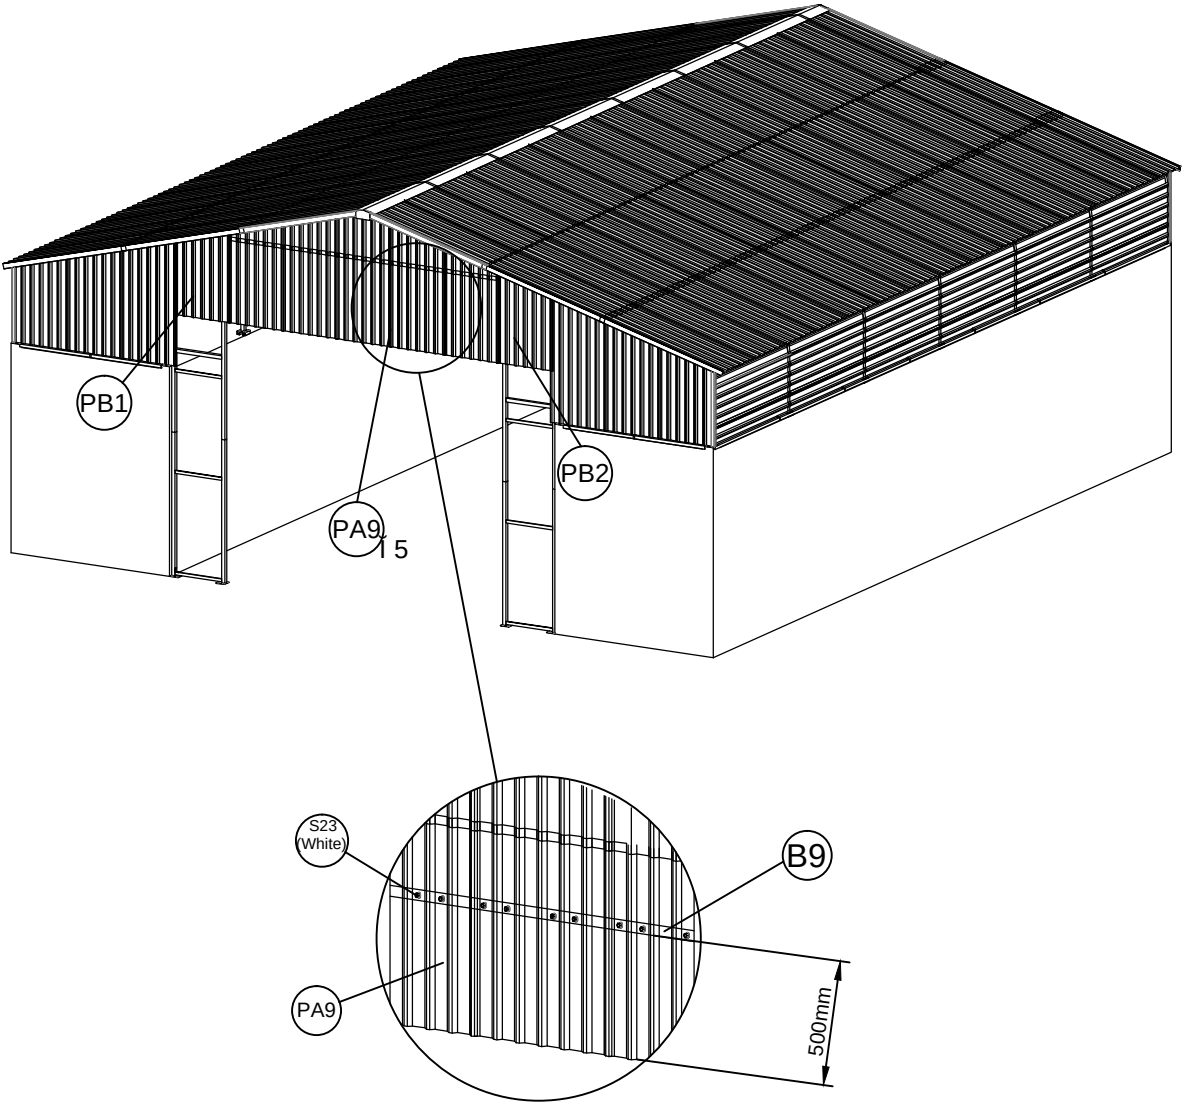

INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PB3	2		Z1	2		S23 (White)	20

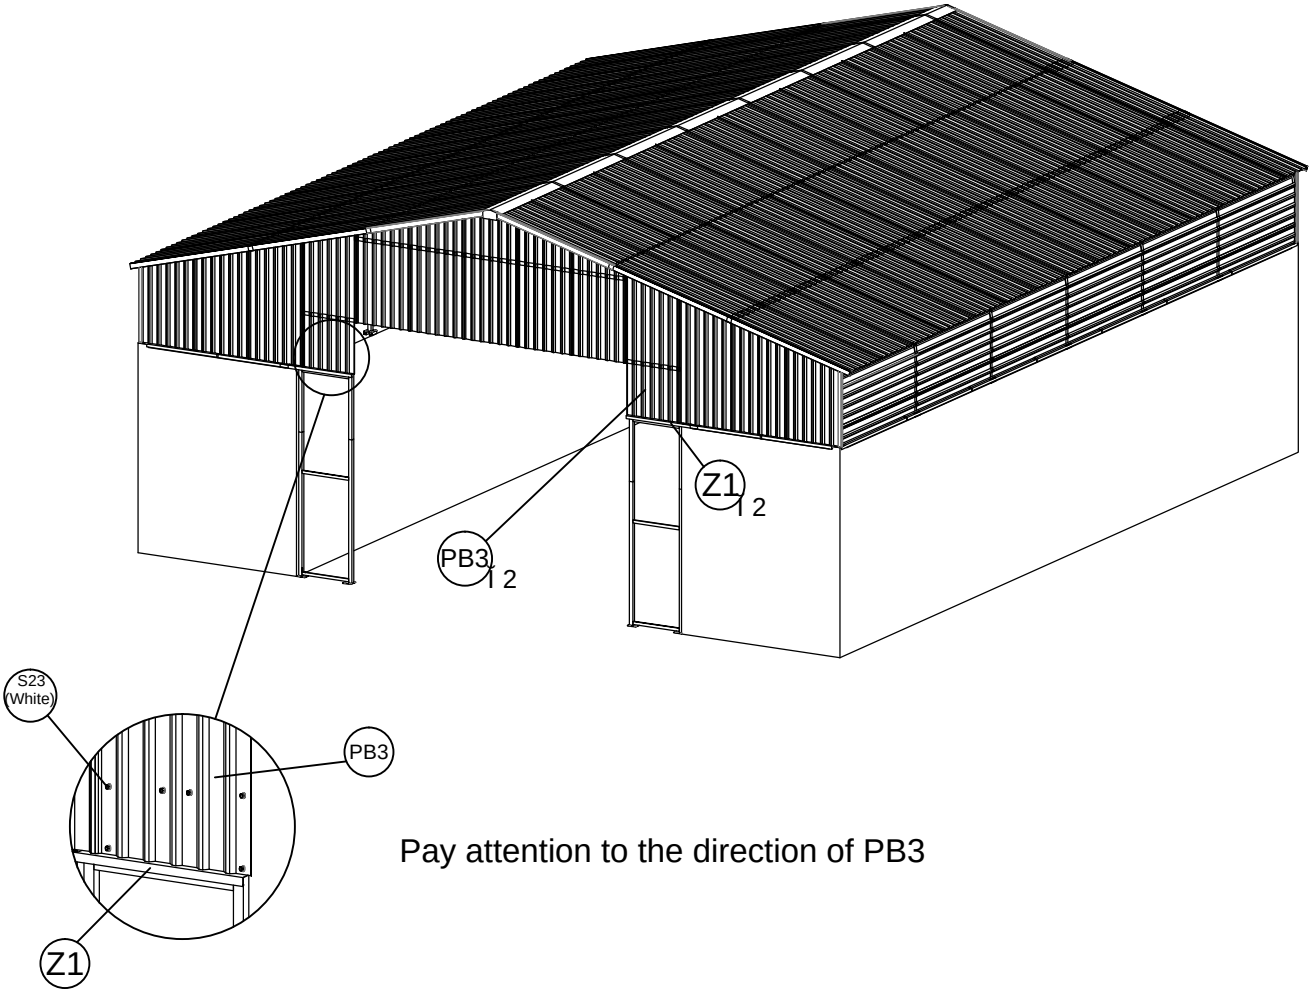

INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	PB4	4		FU1	2		FU2	4
	S23 (White)	24		S23 (Black)	18			

