




CONTAINER SHELTER ASSEMBLY MANUAL

Model: EMC-C404015D

Size: W12m×L12m×H4.5m

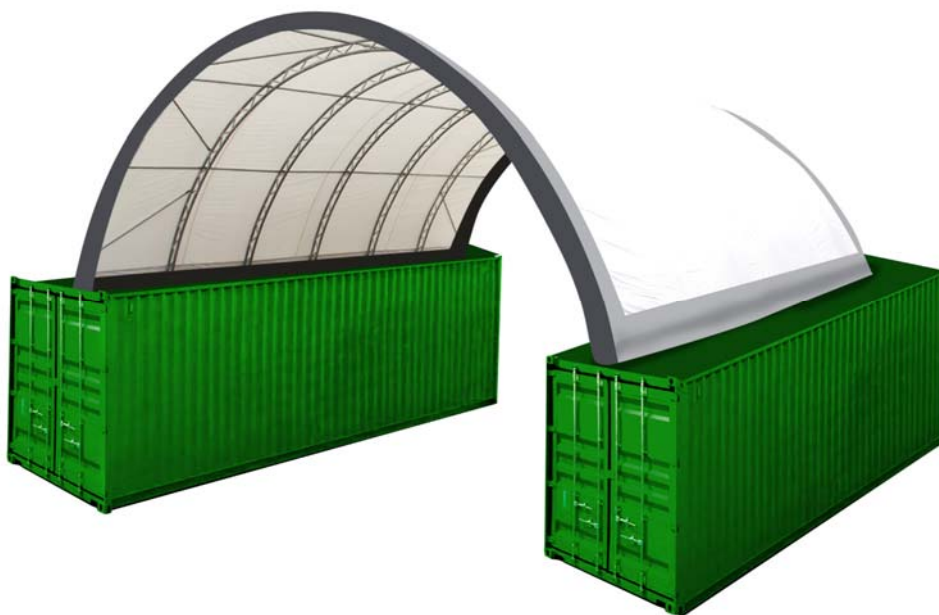

Congratulations on your purchase of our instant shelter. This unit is a combination of excellent manufacturing and design. It is comprised of a rigid frame and a durable cover. For easy assembly, we have marked all the parts with codes. With proper installation, use and maintenance, your unit will provide many years of good and suitable service.

READ ALL THE INSTRUCTIONS BEFORE ASSEMBLY !

1. The proper erection and installation of this building requires a high level of care and safety. We recommend the safety regulations be complied with during the installation. It includes but is not limited to:
 - Safety hats, protective eyewear and protective clothing
 - Safety harnesses for all elevated workers
 - Proper ladder, cage, and safety operation
2. Site selection: Choose a solid level location for your building. Do not install the building where the ground could not keep the building steady. Do not install the building where the ground could not bear the weight of the building. Do not install the building in soft grass ground or wetland.
3. Be cautious with the surroundings. Keep work area clean. Do not set up it near snow drifts, in slippery places, or in wet location. The cover of the building will protect against normal falling leaves and light debris, however, large, fast or sharp falling items etc. may cause a puncture or tear in the cover material. So, keep the building away from such harmful things. Be careful with power and heat sources. Don't keep heat sources near the tarpaulin. Don't expose to open flame.
4. Chose a windless day to install the building. It is very difficult to attach the cover in heavy wind.
5. All snow accumulation on the main cover should be removed as soon as possible. Otherwise, when old snow on the roof becomes hard with new snow falling in, it will increase the burden of the roof badly and will damage the roof.
6. Try to keep the building, especially its base, in a dry condition. This will help the building to have a longer life than keeping it in a wet conditions.
7. The user should be responsible for the parts missing or damage occurred during the installation.
8. Don't make alteration of the frame. Don't hang anything besides included parts to the frame. Damages, consequential damages, or injuries caused by improper installation, alteration, improper use, or damages caused by snow, wind, or any acts of nature are owing to the user. The building is not intended for occupancy for any length of time.

ASSEMBLY PROCEDURE

1. Prepare location and place all unit boxes near location sight. Perform an inventory check before beginning, to be certain all components are available for installation.
2. Secure base plates flanges to base surface.
3. Assemble every group of arch.
4. Begin frame assembly with front end arch, first interior arch, purlins, etc.
5. Add to assemble other groups of arches.
6. Install main cover over frame.
7. Install end covers over end panels.


Read all the detailed instructions and notices in the following assembly instructions!

MAINTENANCE AND CARE

1. If some parts or the cover were accidentally damaged during the use, contact the local supplier for advises on the repairing method or replacements, so that to prevent from further damage and keep the building in a good condition.
2. When replacing the parts, make certain the whole frame and the parts connected to the replaced parts be well fixed or supported.
3. Same with when attaching the cover, choose a windless day to replace the cover. Begin with making certain all the bolts of the frame and the tensioning equipments be well fixed. When taking off the cover, make sure the related ropes, etc. be taken off, and the cover will not be blocked during the way. Avoid taking off the cover with heavy big power equipments.
4. For the building with mechanical door. Keep the door closed if it is not used for long time. This helps the mechanical door to have a longer life.
5. To enlongate the life of the cover, put small duct tape or foam rubber (provide it by yourself) on the frame that comes to in contact with cover. The tape and foam rubber acts as a cushion to avoid rubbing damage to the cover over years.
6. Periodically(once in half a year or more often), the building should be completely inspected and maintained internally and externally to make certain the building remains properly installed and secured. Including: check all bolts and hardware connectors to be certain they are in place and tightened, the base plates are still fixed firmly, check and adjust the ropes if in need, clean the cover with suitable washing. Allowing dirt and debris to sit on cover over an extended time will damage cover irreparably.

Thanks again for choosing this quality product. The following is the detailed assembly instructions for you starting the assembly.

Part	Description	Quantity
1	Top roof tube	7
2	Upper roof curving tube	14
3	Lower roof curving tube	14
4	Sidewall tube	14
5	Horizontal tube	30
6L	Base flange in left corner	2
6R	Base flange in right corner	2
7	Base flange for left side	10
	Tie down ratchet	14
8	Supporting tube	12
8A	Tube clip for supporting tube	24
9	Tensioning tube for roof cover	12+2
10	Hexagon bolt M10×75	234
11	Carriage boltM12×85	40
12	Hexagon bolt M10×30	28
13	Plastic cap	4
14	Roof cover	1
15	Band for tie down ratchet	14
16	Rope for fastening the roof cover, the door cover and the front&back cover	6
15	Hexagon bolt M10×30	4
17	L type steel for rope	4

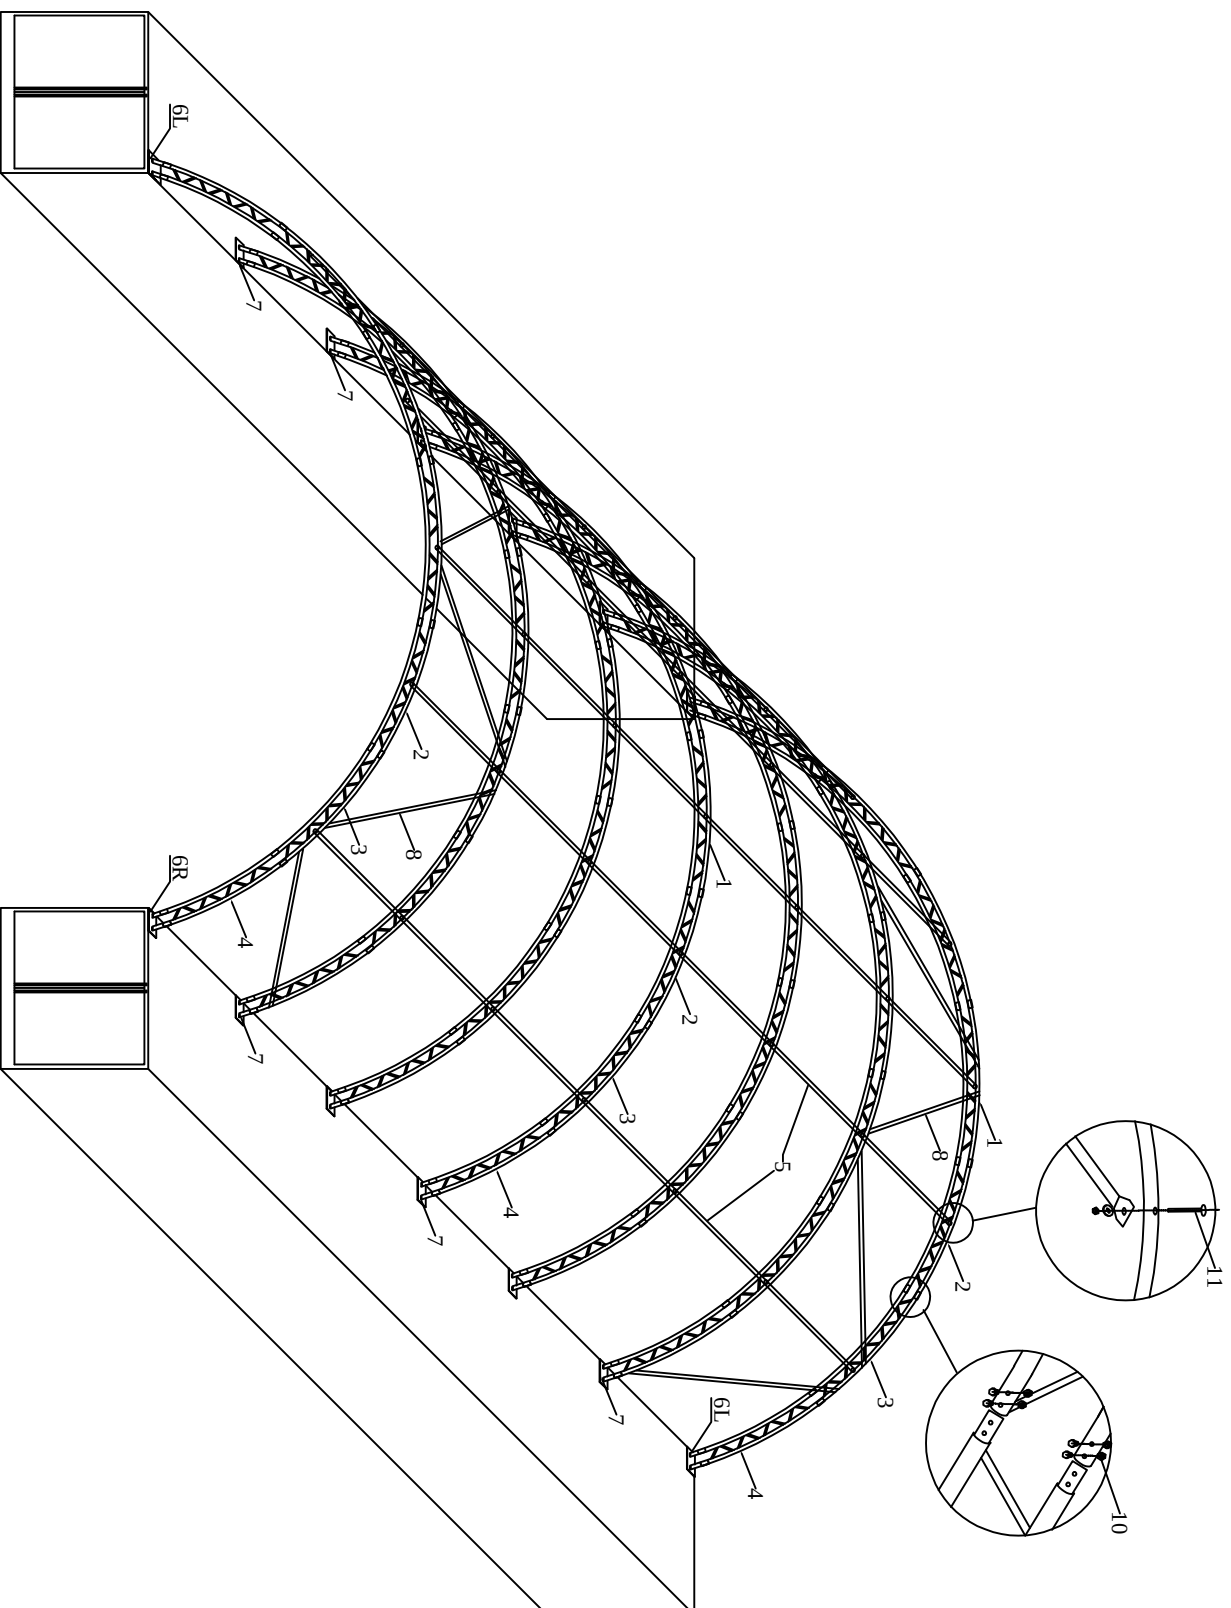


Model:404015C

Size: L12 x W12 x H4.5m


STEP 1 - CONTAINER POSITIONING

1. Ensure the site is level and firm.
2. Place containers 11.46m meters apart.

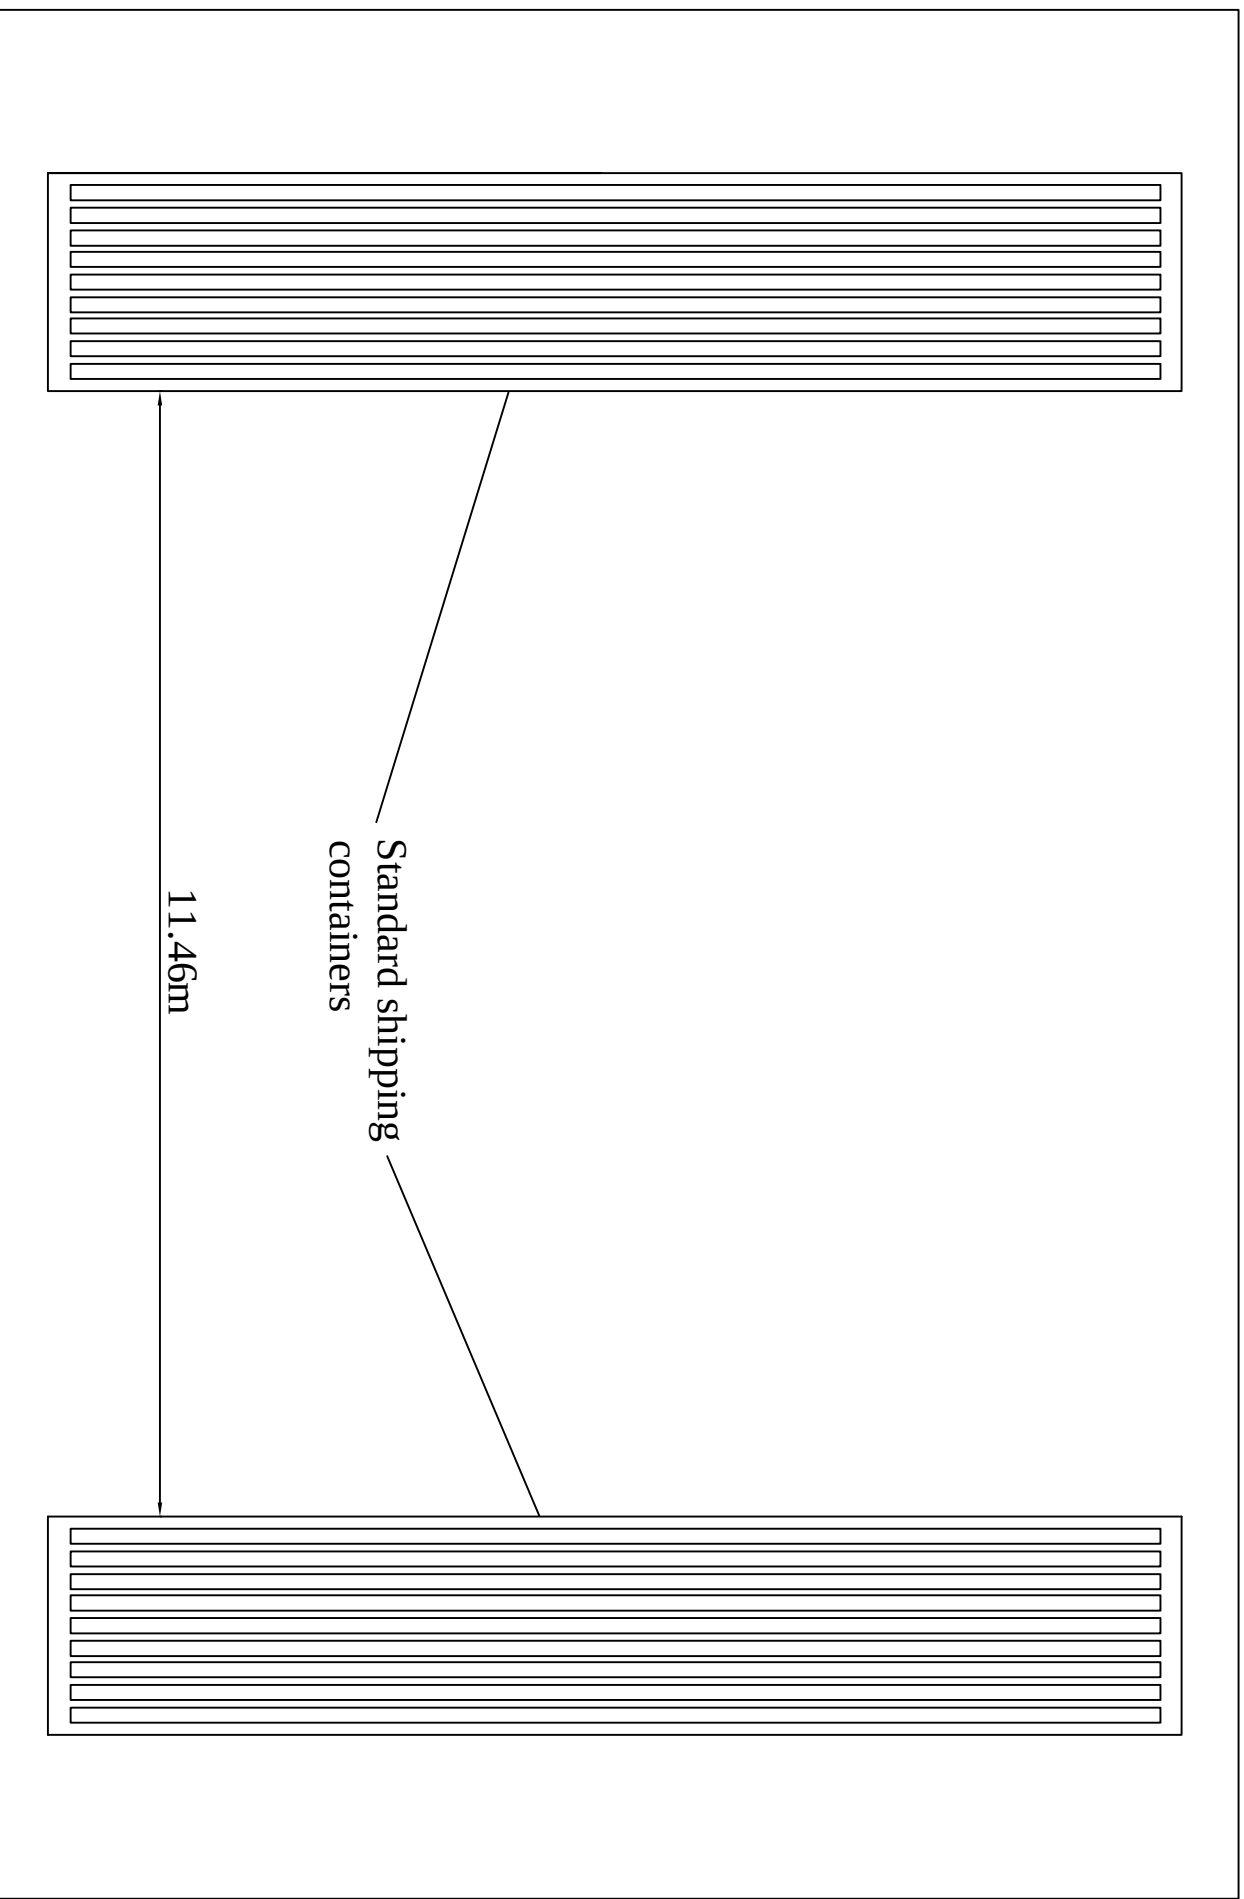

STEP 2 - BASE PLATE LAYOUT & SECURING

1. Secure base plates to the container tops, ensuring that the outside of outer portal to outside of outer portal measurement is 12m(40'). The distance between every two adjoining spigots at each side is 2.0m.
2. Weld the Base Plates to the container tops (the welding can through the 4 holes on each base plate)

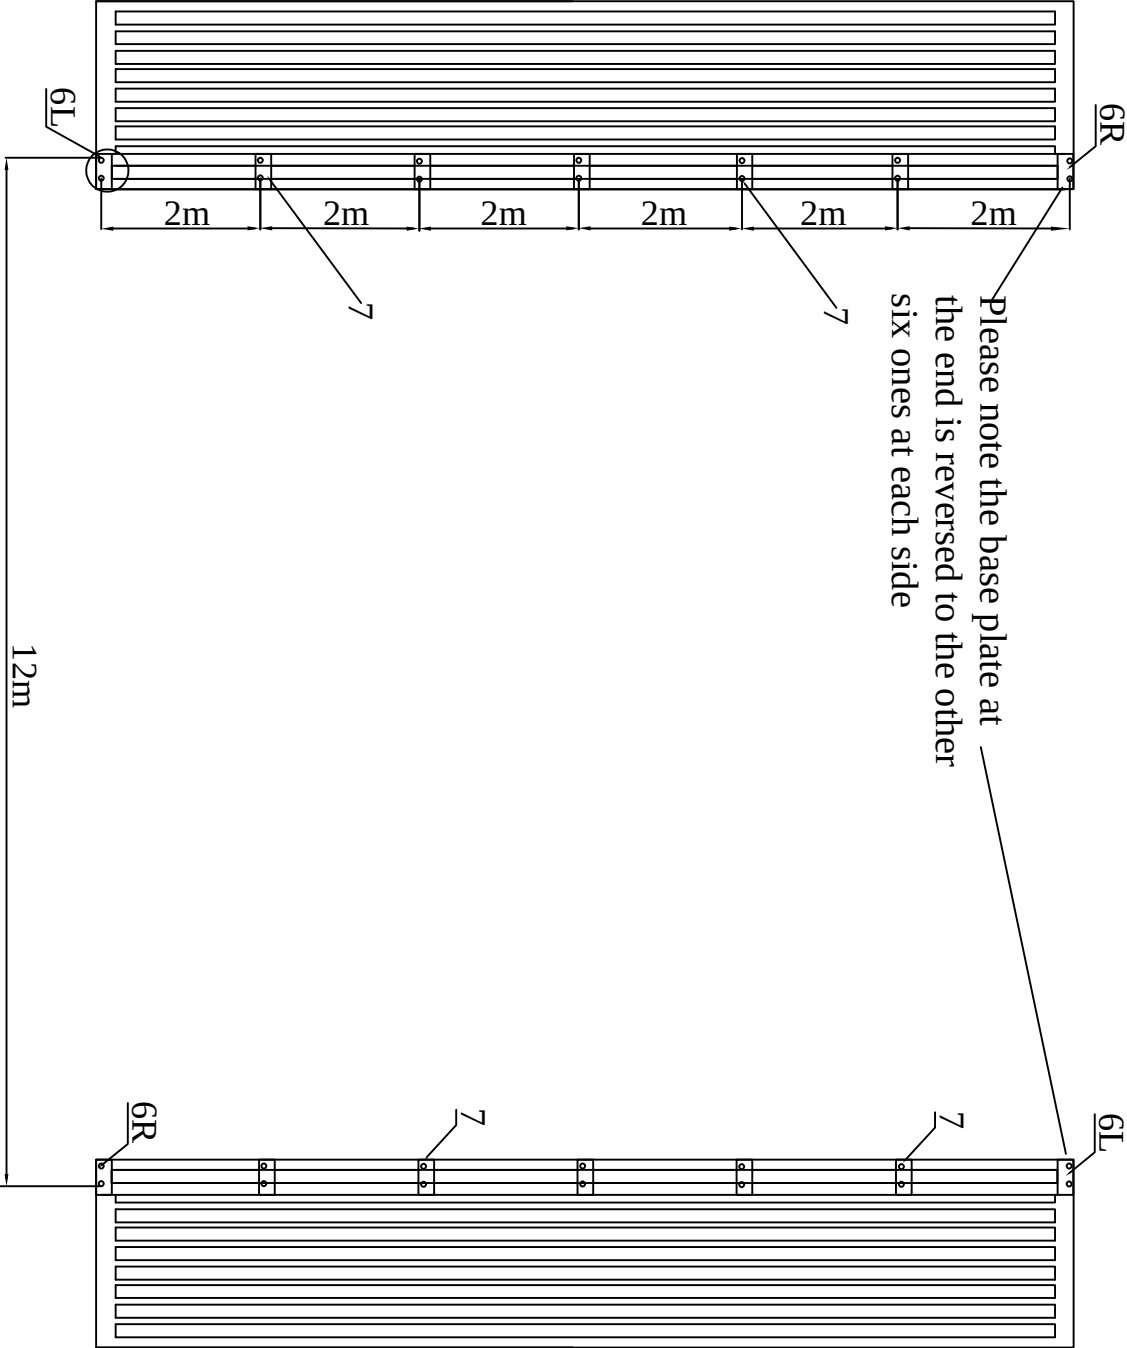

NOTE: When installing, anchor the base plates to the tops of the containers securely first. Do not attempt to assemble the rest of the frame into unsecured base plates.


STEP 3 - FRAME ASSEMBLY

1. Assemble ALL portals on the ground first.
2. Assemble parts #1,2,3,4 and bolt portal legs together using part#10.



STEP 4 - FRAME ASSEMBLY Continued

1. Lift the 1st fully constructed portal into place.
2. Bolt portal legs onto base plate using bolt part#10.
3. Lift, position & bolt 2nd fully constructed portal into position using same method as previous.
4. Attach horizontal tube (part #5) and slanting support tube (part #8) immediately after assembling every two adjoining portals.

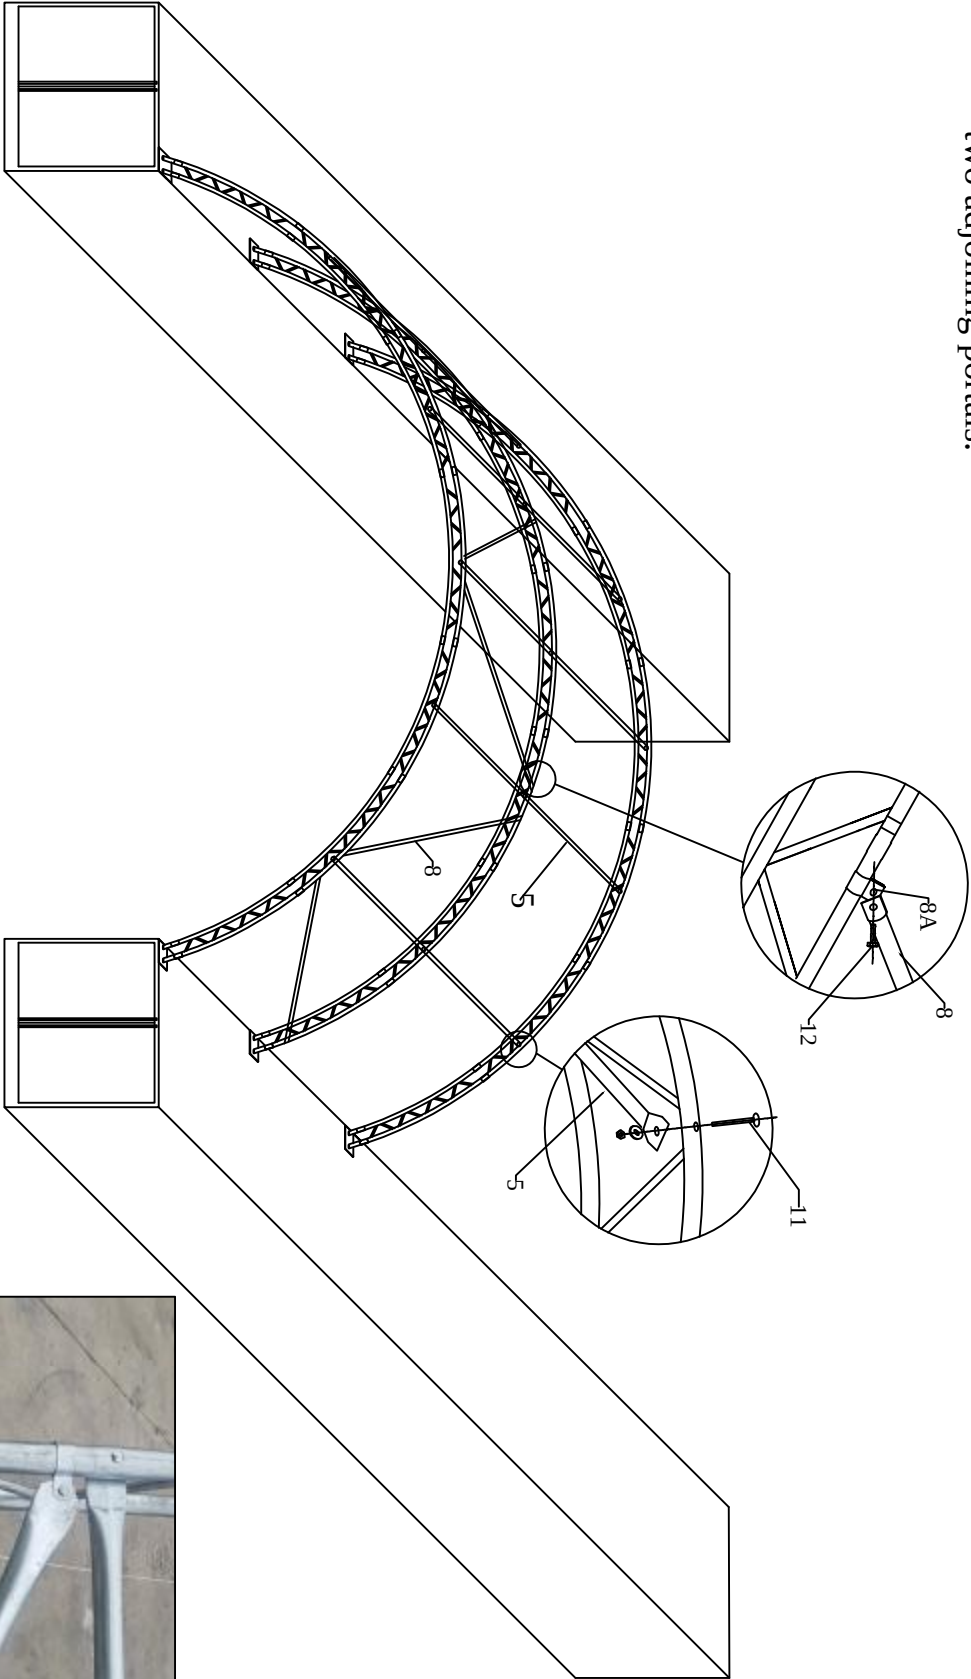


NOTE: Do not attempt to assemble the entire frame including the horizontal connections on the ground and lift into place.



STEP 5 - FRAME ASSEMBLY Continued


1. Repeat the Step 4 until all portals, horizontal tube and slanting support tube are bolted in position.
2. Weld the small flange (part #15) at corners of the two containers.

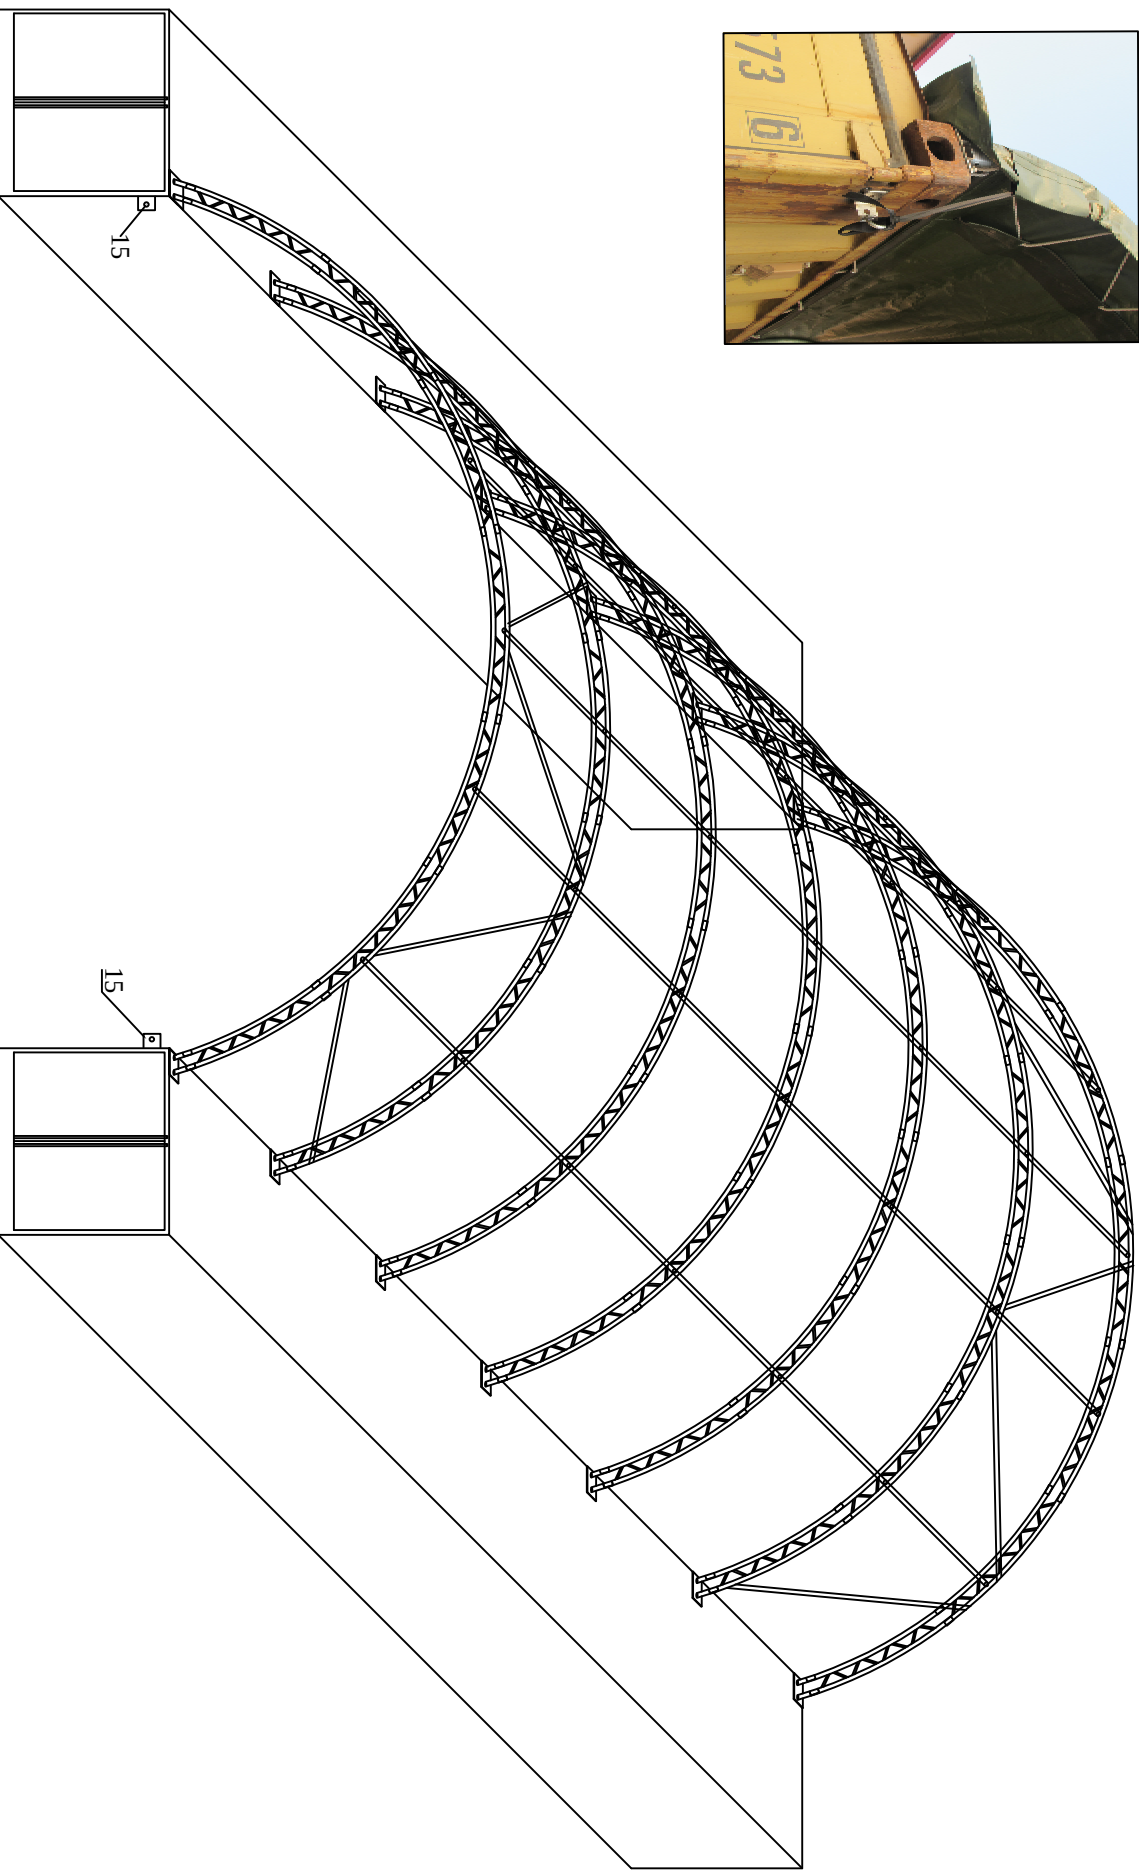

STEP 6 - COVER INSTALLATION

1. Slide the cover over the frame from one side to the other, not end to end.
2. Tension the ends FIRST by pulling and tensioning the ends of the cover using the nylon webbing already threaded through the cover. Tension evenly at both ends and tie off securely.
3. Insert lower tensioning tube part # 9 into the sleeves of the cover.
4. Push tube to very end of sleeve. Feed tube back into sleeve end(centre the tube in sleeve).
5. Insert nylon strap over tensioning tube. Feed ends into tie down ratchet. Do not fully tension. Please refer to details A,B,C,D.

Then make the cuts using
fotrex along the outlines.

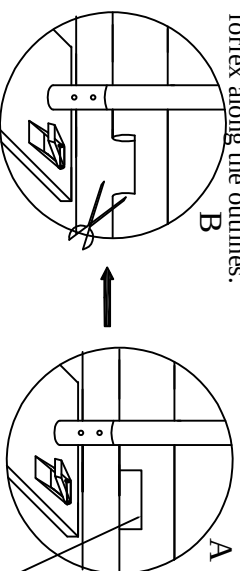


Before inserting the cover tensioning
tube(part #9) into pocket of roof cover,
you need to make cuts for band of
Ratchet on the cover first. Firstly
please draw the outline of the cuts
according to the position of Ratchet.
The position of cuts should be right
upon the ratchets.





draw the outline of cuts

First circle the band for tie
down ratchet(part#15)
around the tensioning tube
through the cuts on the
pocket of the roof cover.

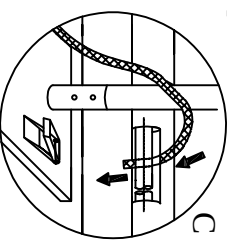

Then put the bands through
the reel of the ratchet, and
tension the band by ratchet.

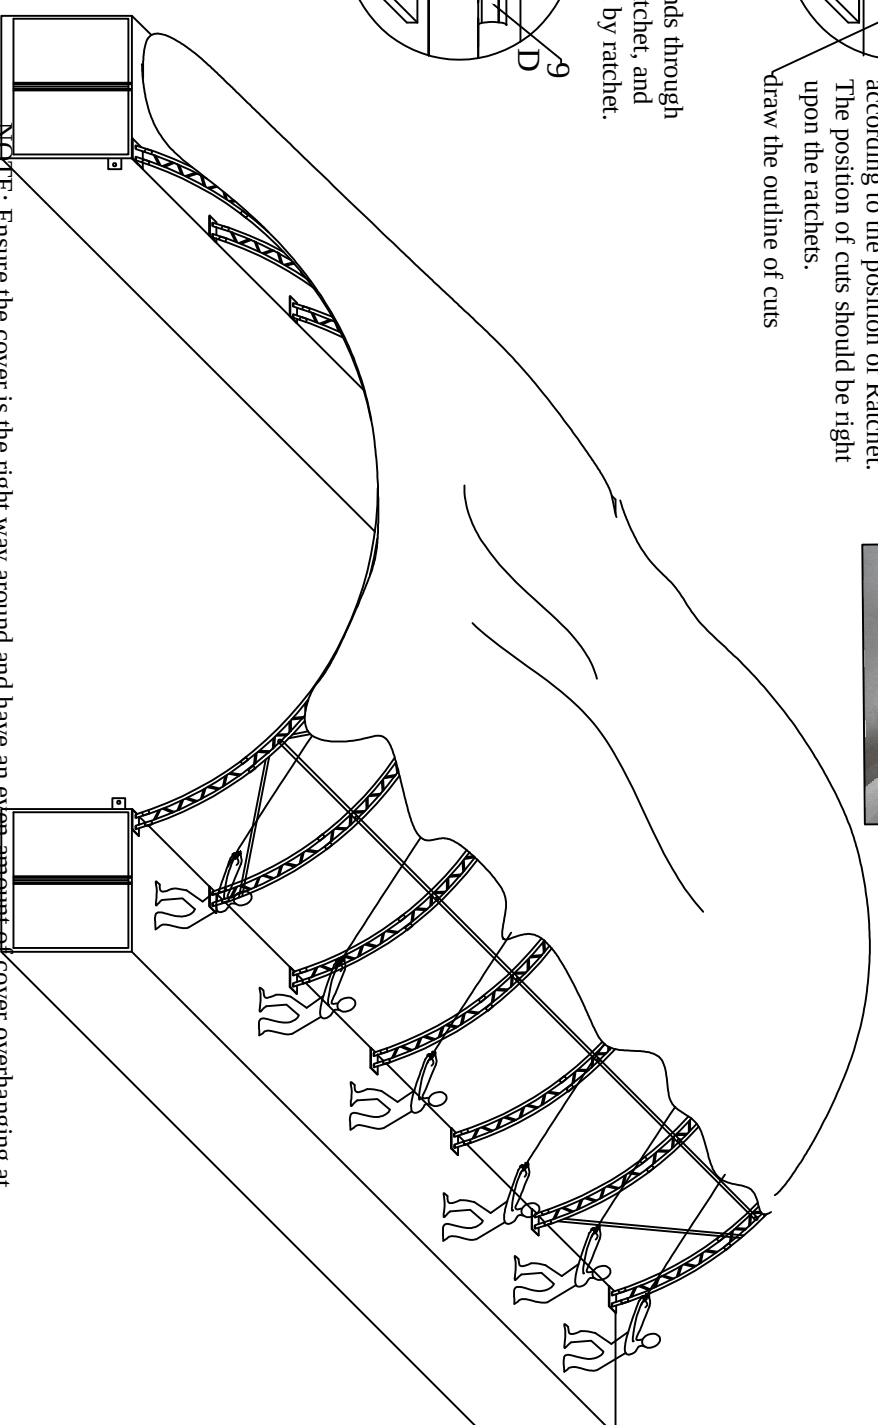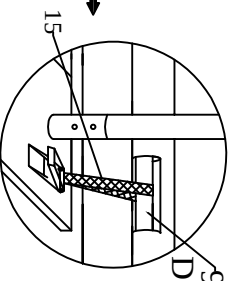

NOTE: Ensure the cover is the right way around and have an even amount of cover overhanging at both ends of the frame. Sleeves are on the underside and are on the sides of the cover only. Then ends of the shelter has nylon tension webbing already threaded through as well as eyelets.

STEP 7 - COVER INSTALLATION Continued

1. Lace cover to end portals through eyelets then fully tension.
2. Fully tension tie down evenly on each side.
3. Tension the nylon rope again and tie them off to the 4 small flanges(part #17).
4. Double check all knots are secure and cover is well tensioned and stretched onto frame.

